

This white freestanding dishwasher is equipped with a rotary dial and 5 wash programs, including 30 minutes quick wash and water saving ECO wash. Enjoy the added benefits of a half load wash and stable support for tall glasses.



Product Details

FEATURES

13 place settings	Wash programs - 5	Fast wash programs	Time Save program
Half load option	Adjustable upper basket	Bottom basket with fold down racks	Durable stainless steel tub
Wash progress indicator	Water safety system		

BENEFITS

Simple to use controls The well-designed rotary dial saves time and reduces confusion. Simply rotate it to select your desired program.

Five wash programs

There's a program to suit your requirements, giving you more flexibility to choose what, when and how you wash. It includes the Fast 30 program, supporting your busy lifestyle.

Fast 30 program

Sometimes a quick wash is all you need for a smaller load. Use the Fast 30 minute program for lightly soiled dishes at breakfast, lunch or dinner and then just get on with your day.

Saves water

With todays climate challenges, we need to do what we can to save water. That why we offer 4.5 star WELS water rated dishwashers that only use 11.8 litres of water, just a fraction of the water you will use when hand washing dishes.

Height adjustable upper basket

For added convenience, the height adjustable upper basket can be easily lifted or lowered when empty. With the flexibility to adjust the upper basket as you need, you will always find a place for everything.

Specifications

PRODUCT PROFILE

Domestic warranty details (yrs)	2
Type of Dishwashers	freestanding
Place settings	13
Drying system	residual drying
Number of spray arms	2
Top shower	No

SPECIFICATION

Water Efficiency Star Rating	4.5
WELS Registration Number	D02347
Water consumption (litres)	11.8
Energy Efficiency Star Rating	3
Energy consumption cold water (kWhr/yr)	295
Noise level dBA	49
Water supply	cold or hot (maximum 60°C)
Basket colour	grey
Service cord length	1.8

DIMENSIONS

Total height (mm) 850

Total width (mm)

598

WASH PROGRAMS

Number of Programs 5



DIMENSIONS

Total depth (mm)	598
Product height excluding removable worktop (mm)	820
Height adjustment (mm)	20

WASH PROGRAMS

Programs	fast 30min,heavy,Eco 50°C,Time Save 50 minutes,Delicate
Wash option	Half Load

CONTROL PANEL

Control panel type	rotary electronic,Push button electronic
Top mounted control panel	No
Control panel finish	white
Knob or button finish	white
Display indicators	rinse aid,end ,wash program,on/off

FEATURES

Other Features	delay start
Water safety system	overfill protection,bottom catchment tray
Filter system	3 stage
Dispenser	detergent,rinse aid
Number of spray levels	2

EXTERIOR

Door finish	white
Counter-balance door	Yes
Side colour	white

UPPER BASKET

Upper basket features	adjustable top basket
Foldable cup shelves	4



EXTERIOR

Plinth colour (kickboard)	white
Removable worktop	Yes
Worktop colour	white

LOWER BASKET

Lower Basket Features	cutlery basket
Foldable Racks	2

HOSES

Inlet hose length (metres)1.5Drain hose length (metres)1.5

SHIPPING

Shipping Volume (m3)	0.38
Shipping Weight (Kg)	49
Shipping Weight (Kg)	49
Pack Dimensions Height (mm)	881
Pack Dimension Width (mm)	644
Pack Dimension Depth (mm)	661

STUFFING QUANTITIES

20ft	48
40ft	102
40ft HC	150





Dimensions





Terms and Conditions

IMPORTANT

This is a guide of product dimensions only. For complete installation instructions, refer to the manual provided with product.

PRODUCT INFORMATION

The descriptors and illustrations in this publication apply to the specific products and models described as at the date of issue. Under our policy of continuous productdevelopment, product specifications may change without notice. Prospective purchasers should therefore check with their retailer to ensure this publication correctly describes theproducts that are being offered for sale. All information supplied is to be used for general reference purposes only and is on the understanding that Electrolux Home Products PtyLtd (Australia) and Electrolux (NZ) Ltd (New Zealand) will not be liable for any loss, liability or damage of whatever kind arising as a result of reliance on such information. Colours ofproducts illustrated are as close as printing limitations allow. Electrolux will at all times comply with its obligations pursuant to law including Trade Practices (Australian Consumer Law) Act and Regulations.

WARRANTY

This warranty only applies to Appliances purchased and used in Australia or New Zealand and used in normal domestic applications and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand. All warranties are subject to the conditions set out in the warranty card accompanying the product when purchased.

ELECTROLUX HOME PRODUCTS AUSTRALIA

telephone: 1300 363 640 fax: 1800 350 067 email: customercare@electrolux.com.au web: www.electrolux.com.au

ELECTROLUX HOME PRODUCTS NEW ZEALAND telephone: 09 573 2230 fax: 09 573 2221 email: customercare@electrolux.co.nz web: www.electrolux.co.nz