


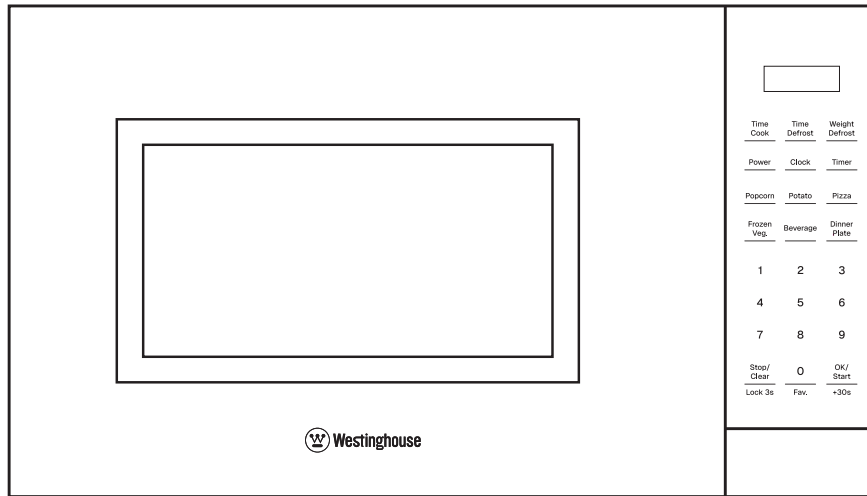


Enjoy peace of mind. Register your appliance today.

Stay updated on better living services,
safety notices and shop for accessories.

1. Open the camera app on your smartphone and point at the QR code to scan.

Product Registration QR code is located on the top of your appliance.

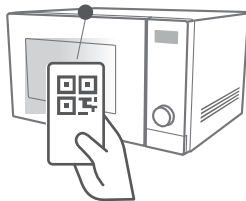

2. Tap the notification or link to open the registration form.
3. Complete your details and enjoy peace of mind.

FREESTANDING MICROWAVE

WMM25D26W

CONGRATULATIONS

Dear Customer,

Congratulations and thank you for choosing our microwave. We are sure you will find it a pleasure to use. Before you use the microwave, we recommend that you read through the relevant sections of this manual, which provides a description of your appliance and its functions.

To avoid the risks that are always present when you use an appliance, it is important that the appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.

After unpacking the appliance, please check it is not damaged. If in doubt, do not use the appliance but contact your local customer care centre.

Conditions of use

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and working environments
- Farm houses
- By clients in hotels, motels and other residential type environments
- Bed and breakfast type environments
- Catering and similar non-retail applications

Please ensure you read the instruction manual fully before you call for service, or a full service fee could be applicable.

Record model and serial number here:

Model number:.....

Serial number:.....

PNC:.....

CONTENTS

Precautions to avoid possible exposure to excessive microwave energy	3
Important safety instructions	3
To reduce the risk of injury to persons grounding installation.....	4
Utensils.....	5
Names of oven parts and accessories	7
Control panel.....	8
Operation	8
Cleaning	11
Trouble shooting.....	11
Installation	12
Warranty.....	15

Please read the user manual carefully and store in a handy place for later reference.

The symbols you will see in this booklet have these meanings:



WARNING

This symbol indicates information concerning your personal safety.



CAUTION

This symbol indicates information on how to avoid damaging the appliance.



IMPORTANT

This symbol indicates tips and information about use of the appliance.



ENVIRONMENT

This symbol indicates tips and information about economical and ecological use of the appliance.

IMPORTANT INFORMATION THAT MAY IMPACT YOUR MANUFACTURER'S WARRANTY

Adherence to the directions for use in this manual is extremely important for health and safety. Failure to strictly adhere to the requirements in this manual may result in personal injury, property damage and affect your ability to make a claim under the Westinghouse manufacturer's warranty provided with your product. Products must be used, installed and operated in accordance with this manual. You may not be able to claim on the Westinghouse manufacturer's warranty in the event that your product fault is due to failure to adhere this manual.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

- Read and follow the specific: "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.
- Only use utensils that are suitable for use in microwave ovens.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- The oven should be cleaned regularly and any food deposits removed.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)
- Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)
- The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.
- The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - by clients in hotels, motels and other residential type environments;
 - farm houses;
 - bed and breakfast type environments.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Metallic containers for food and beverages are not allowed during microwave cooking.
- The appliance shall not be cleaned with a steam cleaner.
- The appliance is intended to be used freestanding.
- The rear surface of appliances shall be placed against a wall.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

DANGER

Electric Shock Hazard

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.



WARNING

Electric Shock Hazard

Improper use of the grounding can result in electric shock.

Do not plug into an outlet until appliance is properly installed and grounded.

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord set or extension cord is used:
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - 2) The extension cord must be a grounding-type 3-wire cord.
 - 3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

Specifications

Model	WMM25D26W
Rated Voltage	230-240 V~ 50 Hz
Microwave Input	1300-1400 W
Microwave Output	900 W

UTENSILS



CAUTION

Personal Injury Hazard. It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

UTENSILS	REMARKS
Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture. Do not leave unattended while cooking."

Materials to be avoided in microwave oven


UTENSILS	REMARKS
Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metal-trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

NAMES OF OVEN PARTS AND ACCESSORIES

(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)

Remove the oven and all materials from the carton and oven cavity.


Your oven comes with the following accessories:

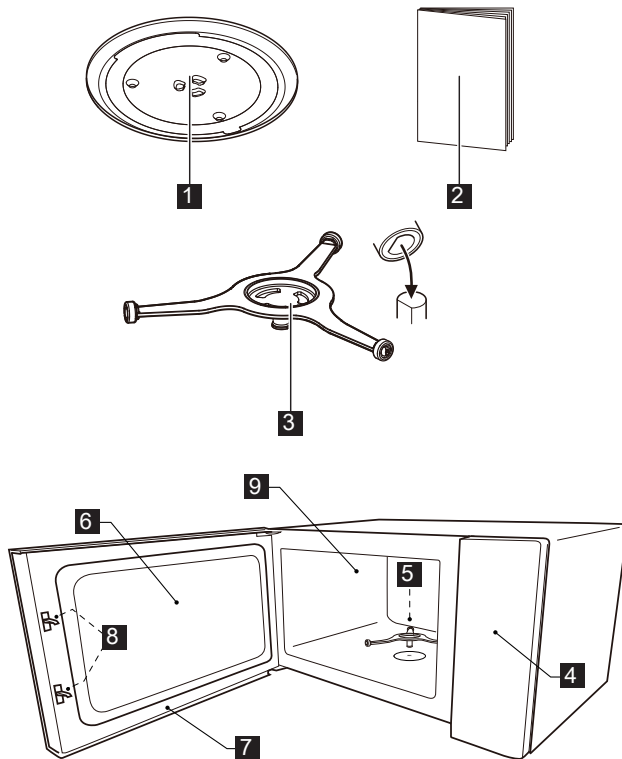


- 1 Glass Tray
- 2 Instruction Manual
- 3 Turntable Ring Assembly
- 4 Control panel
- 5 Turntable Ring Assem
- 6 Observation window
- 7 Door assembly
- 8 Safety interlock system
- 9 Oven cavity

Cleaning the cooking compartment and putting the turntable in place.

For new installations, make sure all packaging and shipping tape has been removed. Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories.

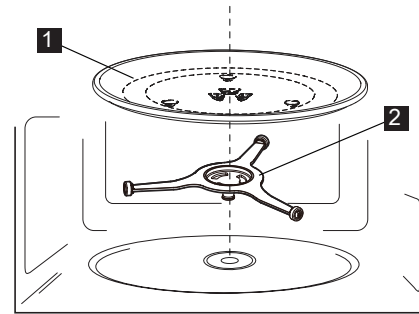

- 1 Glass Tray
- 2 Turntable Ring Assembly

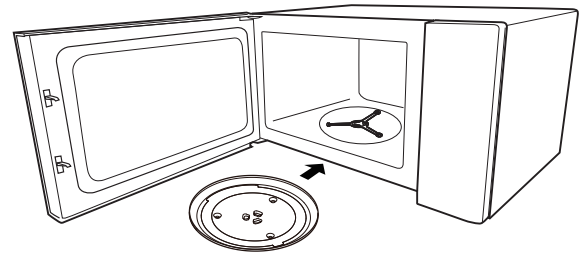


Note:

1. Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
2. Never place the glass tray upside down. The glass tray should never be restricted.
3. Both glass tray and turntable ring assembly must always be used during cooking.
4. All food and containers of food are always placed on the glass tray for cooking.
5. Never restrict the movement of the turntable.
6. If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.

CONTROL PANEL

WMM25D26W

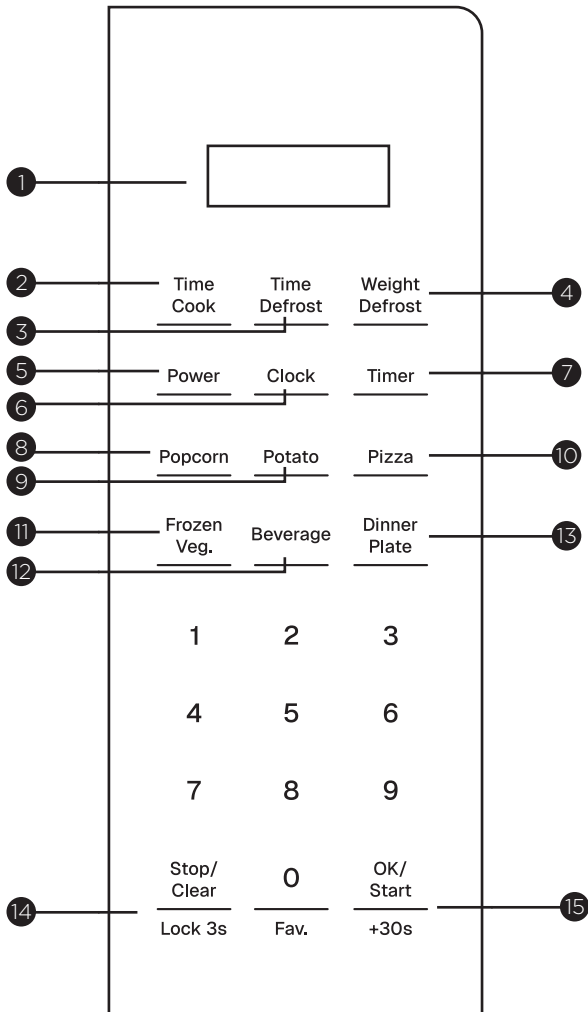

- | | |
|------------------|--------------------|
| ① Display | ⑪ Frozen Vegetable |
| ② Time Cook | ⑫ Beverage |
| ③ Time Defrost | ⑬ Dinner Plate |
| ④ Weight Defrost | ⑭ STOP/Clear |
| ⑤ Power | ⑮ OK/Start+30s |
| ⑥ Clock | |
| ⑦ Timer | |
| ⑧ Popcorn | |
| ⑨ Potato | |
| ⑩ Pizza | |

OPERATION

1. Setting the Clock

- Press “ **Clock** ” once and then “00:00” will display.
- Press the number keys to enter the time.
Example: To set the clock to 12:30, please press “1, 2, 3, 0” in turn.
- Press “ **Clock** ” to confirm. The clock is set.

Notes

- To reset the clock, please repeat step 1 to step 3.
- The clock is a 24-hour display. If the clock is not set, it will not work when powered.

Setting the Kitchen Timer

- Press “ **Timer** ” once and then “00:00” will display.
- Press the number keys to set the desired time.
The maximum time value is “99:99”.
- Press “ $\frac{\text{OK/Start}}{+30s}$ ” to confirm.
The timer starts counting down.

Note

- The kitchen timer is a timer.

Microwave Cooking

The 10 power levels are available.

Level	10	9	8	7	6	5	4	3	2	1	0
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%
Display	PL10	PL9	PL8	PL7	PL6	PL5	PL4	PL3	PL2	PL1	PL0

- Press “ **Time Cook** ” once and then “00:00” will display.
- Press the number keys to set the cooking time.
The maximum time value is “99:99”.
- Press “ **Power** ” once and then “PL10” will display.
- Press the number keys to set the power level.
- Press “ $\frac{\text{OK/Start}}{+30s}$ ” to start cooking.

Notes

- In the process of setting, if “ $\frac{\text{Stop/Clear}}{\text{Lock 3s}}$ ” is pressed or if there is no operation within 1 minute, the setting is invalid.
- The power level can be changed during operation. Press “ **Power** ” once and then the current power will display for three seconds. Press the number keys to change the power.
The oven will work with the selected power.

OPERATION (CONTINUED)

Speedy Cooking

- In standby mode, pressing the number keys 1 to 6 lets you quickly select a cooking time from 1 to 6 minutes. Then you can press " $\frac{\text{OK/Start}}{+30s}$ " to increase the cooking time. The maximum time value is "99:99".
- In standby mode, press " $\frac{\text{OK/Start}}{+30s}$ " once to cook food at 100% power level for 30 seconds. Each press on the same key can increase 30 seconds and the maximum time value is "99:99".

Note

- In the microwave cooking and defrosting by time cooking state, each more press on " $\frac{\text{OK/Start}}{+30s}$ " can increase the cooking time by 30 seconds (except the defrosting by weight and auto menu).

Defrost by Weight

- Press "**Weight Defrost**" once and then the screen will display "dEF1".
- Press the number keys to set the weight of the food. The range of weight is 100- 2000g.
- Press " $\frac{\text{OK/Start}}{+30s}$ " to start defrosting.

Note

- The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.

Defrost by Time

- Press "**Time Defrost**" once and then the screen will display "dEF2".
- Press the number keys to set the desired defrosting time. The maximum time value is "99:99".
- Press " $\frac{\text{OK/Start}}{+30s}$ " to start defrosting.

Notes

- The defrosting power is PL3 and it cannot be changed.
- The buzzer will sound to remind you to turn the food over during defrosting. If no operation, the oven will continue working.

Multi-Stage Cooking

Notes

- Two cooking stages can be set in multi-stage cooking.
- If you set the defrost function, it will work automatically in the first stage.
- The auto menu cannot be set as one of the multi-stage.

Example: Defrost food for 300g and then cook with 50% microwave power for 7 minutes.

- Press "**Weight Defrost**" once and then the screen will display "dEF1".
- Press "3", "0", and "0" to set the weight of the food to 300g.
- Press "**Time Cook**" once and then "00:00" will display.
- Press "7", "0", and "0" to set the cooking time to 7 minutes.
- Press "**Power**" once and then "PL10" will display.
- Press "5" to set the power level to PL5.
- Press " $\frac{\text{OK/Start}}{+30s}$ " to start cooking.

Auto Menu

- Press the corresponding menu key repeatedly to choose the weight of the food you want to cook. Example: Press "**Potato**" twice and then "2" displays.
- Press " $\frac{\text{OK/Start}}{+30s}$ " to start cooking.

Auto Menu Chart

Menu	Weight	Display	Power
Popcorn	50g	50	PL10
	100g	100	
Potato	1 (230g)	1	
	2 (460g)	2	
	3 (690g)	3	
Pizza	200g	200	
	400g	400	
Frozen Veg.	200g	200	
	300g	300	
	400g	400	
Beverage	1 cup (120ml)	1	
	2 cups (240ml)	2	
	3 cups (360ml)	3	
Dinner Plate	200g	200	
	400g	400	

OPERATION (CONTINUED)

Memory Function

You can save the settings for a dish in the memory and call it up again.

1. Press "0" repeatedly to select the memory 1-3 procedure. "1", "2", and "3" will display in order.
2. If the procedure has been set, press " $\frac{\text{Stop/}}{\text{Clear}}$ " to start working. Otherwise, please continue to set.
3. After finishing the setting, press " $\frac{\text{Stop/}}{\text{Clear}}$ " once to save the procedure.

Example: Set memory 2 (cook food with 80% microwave power for 3 minutes.)

1. In standby mode, press "0" twice, and then the screen will display "2".
2. Press " $\frac{\text{Time}}{\text{Cook}}$ " once and then press the number keys "3", "0", and "0" in order.
3. Press "**Power**" once and then press the number key "8".
4. Press " $\frac{\text{OK/}}{\text{Start}} +30s$ " to save the setting and "2" will display.

Notes

- The auto menu and speedy cooking cannot be set as a memory function.
- If the power is not cut off, the procedure will be saved all the time.

Lock Function for Children

You can use this function to disable the screen buttons and prevent your child from accidentally turning the oven on.

To activate the lock:

In standby mode, press and hold " $\frac{\text{Stop/}}{\text{Clear}}$ " for three seconds. A beep sounds and " $\frac{\text{Lock}}{\text{3s}}$ " will display.

To deactivate the lock:

In the locked state, press and hold " $\frac{\text{Stop/}}{\text{Clear}}$ " for three seconds. A beep sounds.

Turntable reset function

You can use this function to reset the utensil to its original position in the oven after cooking. It is easy for you to take food out of the oven. The default turntable reset function is on.

Notes

- This function is valid for a complete cooking. If you press " $\frac{\text{Stop/}}{\text{Clear}}$ " and open or close the oven door during cooking, this function is invalid.
- If you open the oven door or press " $\frac{\text{Stop/}}{\text{Clear}}$ " during the resetting turntable process, the oven will turn to standby mode.
- If the cooking time is within 5 minutes, the accuracy of the turntable is within 30 degrees.
- When the cooking process is completed, the turntable reset function is activated. At this time, the screen will display " $\frac{\text{Turntable}}{\text{Reset}}$ ".

ECO Function

To enter ECO mode:

In standby mode, and the oven door is closed, press

" $\frac{\text{Stop/}}{\text{Clear}}$ " once. The screen will turn off.

To cancel ECO mode:

In ECO mode, pressing any key or open the oven door will cancel it.

Inquiring Function

1. If the clock has been set, the current time will display for three seconds by pressing "**Clock**" in the cooking state.
2. In the microwave cooking state, press "**Power**" to inquire about the power level. It will display for three seconds.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

TROUBLE SHOOTING

NORMAL		
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.	
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.	
Steam accumulating on door, hot air out of vents	In cooking steam may come out of the food. Most steam will escape from vents, some steam may accumulate on cooler surfaces like the oven door. This is normal.	
Oven started accidentally with no food in.	Do not run the unit without any food inside. It is very dangerous.	
TROUBLE	POSSIBLE CAUSE	REMEDY
Oven cannot be started.	(1) Power cord is not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker trips.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with the electrical outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door is not closed properly.	Close door properly.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to the appropriate electrical and electronic waste collection points where available.


COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.

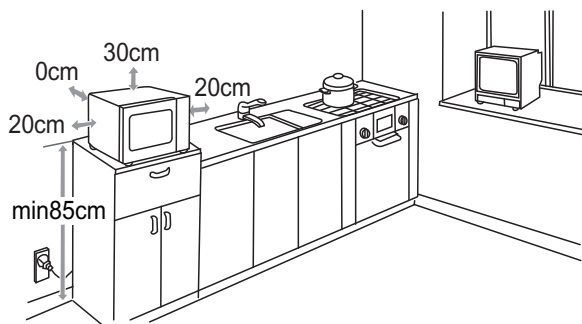

- (1) The minimum installation height is 85cm.
- (2) The rear surface of appliance shall be placed against a wall.
Leave a minimum clearance of 30cm above the oven. A minimum clearance of 20cm is required between the oven and any adjacent walls.
- (3) Do not remove the legs from the bottom of the oven.
- (4) Blocking the intake and/or outlet openings can damage the oven.
- (5) Place the oven as far away from radios and TV as possible.
Operation of microwave oven may cause interference to your radio or TV reception.

2. Plug your oven into a standard household outlet.
Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



WARNING

Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

The accessible surface may be hot during operation.



NOTES

[illegible]

NOTES

[illegible]



FOR SALES IN AUSTRALIA AND NEW ZEALAND
APPLIANCE: WESTINGHOUSE MICROWAVES

This document sets out the terms and conditions of the product warranties for Westinghouse Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should there be a manufacturing defect in your Appliance. This warranty is in addition to other rights you may have under the Australian Consumer Law.

1. In this warranty:

- (a) 'ACL' or 'Australian Consumer Law' means Schedule 2 to the Competition and Consumer Act 2010;
- (b) 'Appliance' means any Electrolux product purchased by you and accompanied by this document;
- (c) 'ASC' means Electrolux's authorised serviced centres;
- (d) 'Westinghouse' is the brand controlled by Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited (collectively "Electrolux") of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
- (e) 'Warranty Period' means the period specified in clause 3 of this warranty;
- (f) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.

2. Application: This warranty only applies to new Appliances, purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) other rights and remedies under a law to which the Appliances or services relate, including any non-excludable statutory guarantees in Australia and New Zealand.

3. Warranty Period: Subject to these terms and conditions, this warranty continues for in Australia for a period of 24 months and in New Zealand for a period of 24 months, following the date of original purchase of the Appliance.

4. Repair or replace warranty: During the Warranty Period Electrolux or its ASC will not service the Appliance. If the Appliance is defective, you should return the Appliance to the place of purchase for a replacement. You agree that any replaced Appliances or parts become the property of Electrolux.

5. Travel and transportation costs: Subject to clause 7, Electrolux will bear the reasonable cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. Travel and transportation will be arranged by Electrolux as part of any valid warranty claim.

6. Proof of purchase is required before you can make a claim under this warranty.

7. Exclusions: You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. This warranty does not cover:

- (a) light globes, batteries, filters or similar perishable parts;
- (b) parts and Appliances not supplied by Electrolux;
- (c) cosmetic damage which does not affect the operation of the Appliance;
- (d) damage to the Appliance caused by:
 - (i) negligence or accident;

- (ii) misuse or abuse, including failure to properly maintain or service;
- (iii) improper, negligent or faulty servicing or repair works done by anyone other than an Electrolux authorised repairer or ASC;
- (iv) normal wear and tear;
- (v) power surges, electrical storm damage or incorrect power supply;
- (vi) incomplete or improper installation;
- (vii) incorrect, improper or inappropriate operation;
- (viii) insect or vermin infestation;
- (ix) failure to comply with any additional instructions supplied with the Appliance;

In addition, Electrolux is not liable under this warranty if:

- (a) the Appliance has been, or Electrolux reasonably believes that the Appliance has been, used for purposes other than those for which the Appliance was intended, including where the Appliance has been used for any non-domestic purpose;
- (b) the Appliance is modified without authority from Electrolux in writing;
- (c) the Appliance's serial number or warranty seal has been removed or defaced.

8. How to claim under this warranty: To enquire about claiming under this warranty, please follow these steps:

- (a) carefully check the operating instructions, user manual and the terms of this warranty;
- (b) have the model and serial number of the Appliance available;
- (c) have the proof of purchase (e.g. an invoice) available;
- (d) telephone the numbers shown below.

9. Australia: For Appliances and services provided by Electrolux in Australia: Electrolux goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. 'Acceptable quality' and 'major failure' have the same meaning as referred to in the ACL.

10. New Zealand: For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act. Where the Appliance was purchased in New Zealand for commercial purposes the Consumer Guarantee Act does not apply.

11. Confidentiality: You accept that if you make a warranty claim, Electrolux and its agents including ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice

Before calling for service, please ensure that the steps listed in clause 8 above have been followed.

FOR SERVICE or to find the address of your nearest authorised service centre in Australia PLEASE CALL 13 13 49 For the cost of a local call (Australia only)	AUSTRALIA ELECTROLUX HOME PRODUCTS 163 O'Riordan Street, Mascot NSW 2020 electrolux.com.au	FOR SPARE PARTS or to find the address of your nearest spare parts centre in Australia PLEASE 13 13 50 For the cost of a local call (Australia only)
FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand PLEASE CALL 0800 10 66 10 (New Zealand only)	NEW ZEALAND ELECTROLUX (NZ) Limited 3-5 Niall Burgess Road, Mount Wellington electrolux.co.nz	FOR SPARE PARTS or to find the address of your nearest spare parts centre in New Zealand PLEASE 0800 10 66 20 (New Zealand only)

For more information on all Westinghouse appliances, or for dimension and installation information, call into your retailer, phone or email our customer care team or visit our website:

AUSTRALIA

phone: 131349

email: customercare@electrolux.com.au

web: westinghouse.com.au

NEW ZEALAND

phone: 0800 436 245

email: customercare@electrolux.co.nz

web: westinghouse.co.nz