

USER MANUAL

Side by Side, Top Mount,
Bottom Mount, Single Door.



REFRIGERATION



Westinghouse

CONTENTS

CONGRATULATIONS

Congratulations and thank you for choosing our refrigerator. We are sure you will find your new appliance a pleasure to use. Before you use the appliance, we recommend that you read through the relevant sections of this manual, which provides a description of your appliance and its functions.

To avoid the risks that are always present when you use an electric appliance, it is important that the appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check it is not damaged.

If in doubt, do not use the appliance but contact your local customer care centre.

CONTENTS

Important safety instructions	3
All models	
General installation	4
Clearances	6
Initial start up	8
Care & maintenance	8
Helpful hints	9
Compact side by side	
Standard refrigerator features	10
Ice & water refrigerator features	11
Ice & water installation	12
Ice & water initial start up	13
Ice & water care & maintenance	13
Standard model electronic display	14
Setting the clock	14
Adjusting temperatures	14
Other display features	15
Ice & water model electronic display	16
Setting the clock	16
Adjusting temperatures	16
Other display features	16
Ice & water model dispenser features	18
Other features	20
Changing light bulbs	21
Classic side by side	
Standard refrigerator features	22
Ice & water refrigerator features	23
Installation	24
Initial start up	25
Care & maintenance	25
Adjusting temperatures manual model	26
Ice & water model electronic display	26
Setting the clock	27
Adjusting temperatures	27
Other display features	27
Other features	29
Changing light bulbs	31
Other models	
Top mount electronic refrigerator features	32
Bottom mount electronic refrigerator features	33
Top mount manual refrigerator features	34
Bottom mount manual refrigerator features	35
Single door all refrigerator features	36
Single door all freezer features	37
Adjusting temperatures	38
Other features	39
Changing light bulbs	41
Troubleshooting	42
Notes	44
Warranty	47

IMPORTANT SAFETY INSTRUCTIONS

Please read the user manual carefully and store in a handy place for later reference.
The symbols you will see in this booklet have these meanings:



WARNING

This symbol indicates information concerning your personal safety



CAUTION

This symbol indicates information on how to avoid damaging the appliance



TIPS & INFORMATION

This symbol indicates tips and information about use of the appliance



ENVIRONMENTAL TIPS

This symbol indicates tips and information about economical and ecological use of the appliance

Meanings of symbols used in this manual are shown below:



This symbol indicates never to do this



This symbol indicates always do this



WARNING

- If pressurised aerosol containers bear the word 'flammable' and/or a small flame symbol, do not store them inside any refrigerator or freezer. If you do so you may cause an explosion.
- When you dispose of your old refrigerators and freezers, remove any doors. Children can suffocate if they get trapped inside.
- This appliance contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.



TIPS & INFORMATION

IMPORTANT – CHECK FOR ANY DAMAGES OR MARKS. If you find the refrigerator is damaged or marked, you must report it within 7 days if you wish to claim for damage/marks under the manufacturers warranty. This does not affect your statutory rights.



ENVIRONMENTAL TIPS

Information on disposal for users

- Most of the packing materials are recyclable. Please dispose of those materials through your local recycling

depot or by placing them in appropriate collection containers.

- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.



WARNING

- ✓ The appliance must be plugged into its own dedicated 220-240V, 50Hz AC electrical outlet.
- ✓ Ensure that the electric outlet is properly earthed to ground. Consult a qualified electrician if you are unsure.
- ⊘ Don't use an extension cord or adapter plug.
- ✓ If the power cord is damaged, it should be replaced by a service technician or a qualified person.
- ✓ Unplug the appliance before cleaning and before changing the light bulb to avoid electric shock.
- ⊘ Never unplug the appliance by pulling on the power cord. Always grip the plug firmly, and pull straight out of the receptacle to prevent damaging the power cord.
- ✓ Choose a location that is not too cold - the temperature should be above 10°C.
- ✓ Put the appliance in a dry place, avoiding areas of high moisture or humidity.
- ⊘ Don't put the appliance in frosty or unprotected areas, for example in a garage or on a verandah.
- ⊘ Don't put the appliance in direct sunlight.
- ⊘ Don't put the appliance near stoves, fires or heaters.



WARNING

It is important to use you refrigerator safely. This means you need to supervise young children and infirm persons when they use it. You need to make sure that young children do not play with the refrigerator.

Follow the tips below:

- ⊘ Never let children play with the refrigerator.
- ⊘ Never store fizzy drinks in the freezer compartment.
- ⊘ Never try to repair the refrigerator yourself.
- ⊘ Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock.
- ⊘ Never use electrical appliances inside the refrigerator or freezer.



Westinghouse

INSTALLATION


GENERAL INSTALLATION FOR ALL MODELS

When correctly installed, your appliance should:

- have adequate clearance to the back, sides and top for air circulation
- be aligned to the surrounding cupboards
- have doors that will self close from a partially open position
- have a stability foot in place to prevent the appliance falling forward when a door with heavy food load is opened (models FJ302, FJ362, RP372, RP432, VWRM4300, WFM3600, top mount and bottom mounts).

INSTALLATION

The appliance should arrive with the front rollers wound down. We recommend that the appliance be tilted backwards by about 10 to 15 millimetres, this will allow the doors to self close providing a consistent door seal. The stability foot (where applicable) should also be wound up fully so as not to interfere with the operation of the rollers.

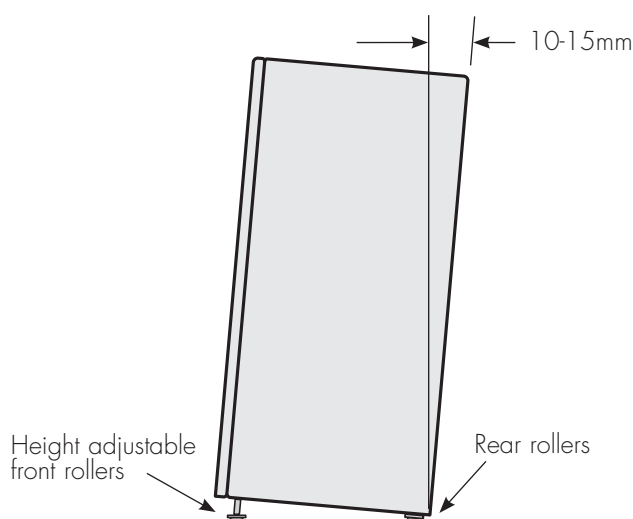

When you want to install your appliance, take the following steps.


1. Roll the refrigerator into it's final position.

WARNING


The rollers are designed for forward or backward movement only. They are not castors. Moving the refrigerator sideways may damage your floor and the rollers.

2. If the appliance is not tilted back you can adjust the two front rollers by adjusting the large plastic roller nut (refer page 5). You may need two people, one to adjust rollers and one to tilt the refrigerator slightly back to take the weight of the appliance off the front rollers. This will increase or decrease the height of the rollers. One turn of the nut will change the tilt of the refrigerator by approximately 10mm.



3. If the cabinet is level, then the side walls should be plumb or vertical. If the cabinet is built in or partly built in check the alignment of the cabinet side against the cupboard.

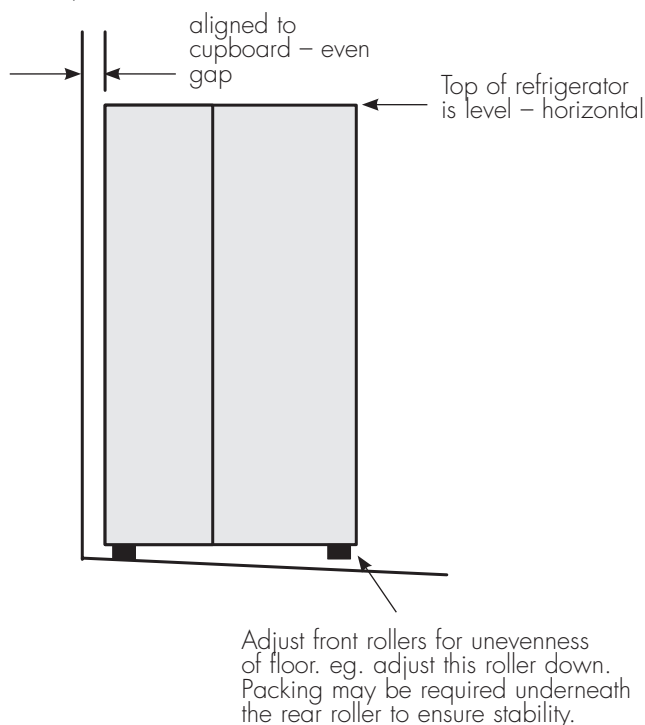

4. If the appliance now rocks from one corner to the opposite rear corner, this means that the floor is uneven; you will need to put some packing under one of the rear rollers.
5. You may now need to fine-tune the installation by adjusting the front rollers once again.
6. When you have the appliance in it's final position wind the stabilising foot down (where applicable) until it just makes contact with the floor. Whenever you need to move the appliance, wind the foot back up so the appliance can move freely.

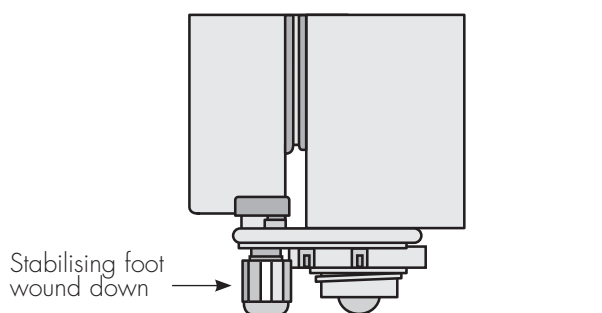

On certain floor surfaces the appliance may roll forward during operation. A roller stop on single door models can be placed under the front rollers.

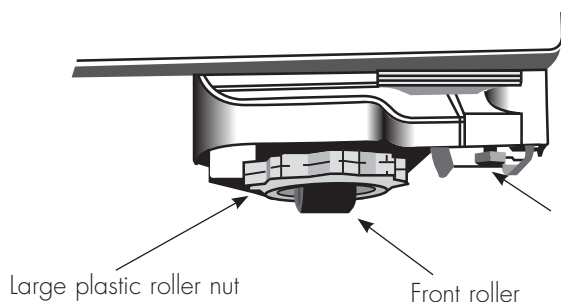
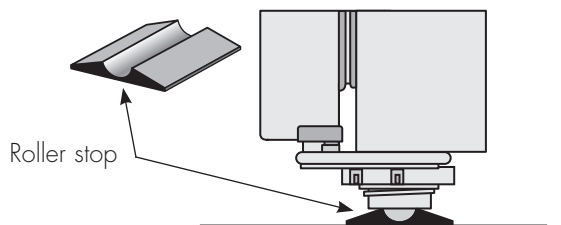


The doors can be adjusted up or down. Depending on the amount of adjustment required it may be sufficient to adjust only one door (see diagram top right).

NOTE: When the height of the rollers and adjusting bolts (compact side by side models only) are correctly adjusted the refrigerator will stand firmly on the floor and the doors will be in line with one another.




SIDE BY SIDE DOOR ADJUSTMENT

Each door is independently adjustable in the vertical direction by turning the adjustable bolts under the hinges using the spanner provided.

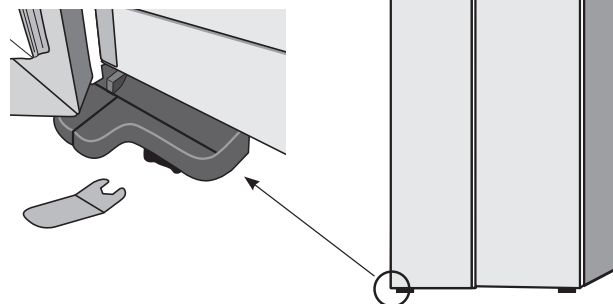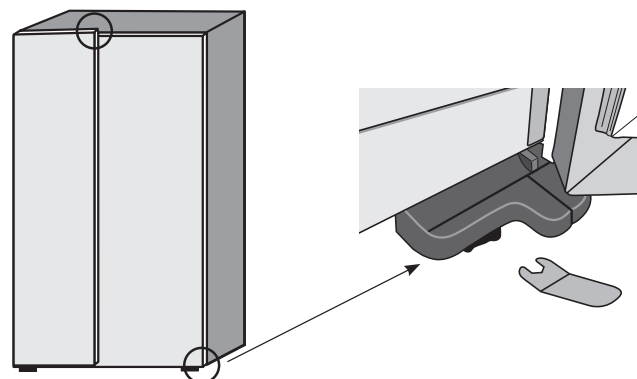



INSTALLATION

CLEARANCES

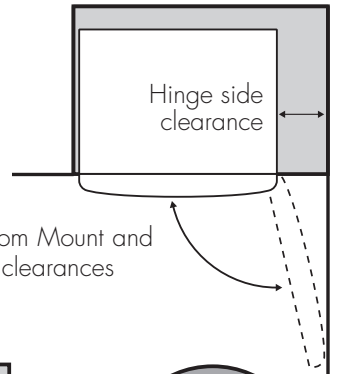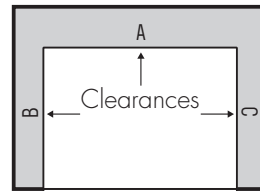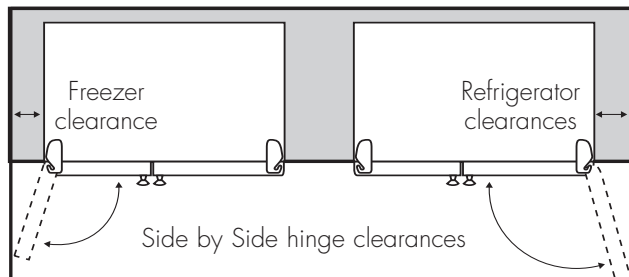

Top Mount, Bottom Mount and Single Door clearances

MODEL	HINGE SIDE CLEARANCE
Compact Side by Side models	250mm (freezer) & 350mm (refrigerator)
Classic Side by Side models	280mm
Top Mount models	350mm
Bottom Mount models	
Single Door Refrigerator models	
Single Door Freezer models	

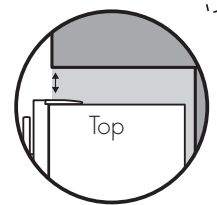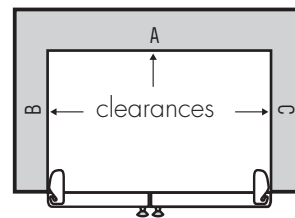

Side and Top clearances

NOTE: Doors are designed to sit proud of the cabinetry.

CLEARANCES

MODEL	A MIN	A MAX	B	C	TOP
COMPACT SIDE BY SIDE MODELS					
WSE6100	20mm	NA	5mm	5mm	10mm
WSE6070					
CLASSIC SIDE BY SIDE MODELS					
RS662	50mm	NA	10mm	10mm	10mm
RS663					
RS644					
RS645					
TOP MOUNT MODELS					
RJ392/WTM3900	50mm	75mm	30mm	30mm	50mm
RJ393					
RJ422/WTM4200					
RJ423/WTE4200					
RJ442					
RJ443					
RJ522/WTM5200					
RJ523/WTE5200					
BOTTOM MOUNT MODELS					
BJ383	50mm	75mm	30mm	30mm	50mm
BJ384					
BJ433/WBE4300					
BJ434/WBM4300					
BJ513/WBE5100					
BJ514/WBM5100					
SINGLE DOOR REFRIGERATOR MODELS					
RP372/VVRM3700	50mm	75mm	30mm	30mm	50mm
RP423/VVRM4300					
SINGLE DOOR FREEZER MODELS					
FJ302/WFM3000	50mm	75mm	30mm	30mm	50mm
FJ362/WFM3600					



INSTALLATION

INITIAL START UP

INITIAL START UP

1. Please remove all internal packaging before use. Any glue or tape residue or the like should be removed with a solution of mild detergent and water.
2. Clean your appliance thoroughly following the instructions on this page and wipe off any dust that has accumulated during shipping.
3. Install accessories such as the ice cube storage bin. The accessories are packed together to prevent damage during delivery.
4. Plug your appliance into the power point. If you need to roll the appliance out to get to the power point, remember to raise the stabilising foot (where fitted) before you do so.
5. We recommend that you let your refrigerator run for two to three hours before you put any food in it. This will allow you to check that it is operating properly and that enough cool air is circulating.

REFRIGERATOR/FREEZER OPERATION

It is normal for the rear, sides and centre mullion of the appliance to feel warm. These areas are warm because the appliance transfers heat from the food placed inside to the outside air.

There is a cooling coil located behind the rear wall of the freezer section. This coil cools and removes moisture from the air. A fan at the rear of the freezer section then circulates cold, dry air throughout the refrigerator. The air circulation means that foods are refrigerated far more quickly than in refrigerators where there is less air circulation.

Avoid placing food against air outlets as this will affect air circulation. See product diagrams for location of air outlets. A light frosting will occasionally occur on the interior of the freezer when the door is opened frequently. This is normal and will disappear after a few days in most climates.

Make sure you fully close the freezer door after you load or remove food. If the door is left partly open, a heavy frost will coat the inside of the freezer. If a frost develops, remove it. Take care to properly close the door and the frost will not reoccur.

Your new energy efficient appliance uses a high-speed compressor and other energy efficient components which may produce different noises to your old appliance.

These sounds are normal and include:

- compressor running noise.
- air movement noise from the small fan motor.
- occasional gurgling, similar to water boiling.
- a popping noise, heard during automatic defrosting.
- a clicking noise, just prior to the compressor starting up.

These noises are normal and not cause for alarm.



WARNING

Before cleaning: Remove the power cord from the power socket. This will make sure there is no chance of getting an electric shock.

CARE & MAINTENANCE

CLEANING THE EXTERIOR

An occasional wipe over with a clean, damp cloth will help remove finger marks. You should only clean the doors with lukewarm, soapy water and a soft cloth. Rinse with clean water and then wipe the surface with a soft, clean cloth to remove any soapy residue.



WARNING

Do not use abrasive pads or other cleaners as they are likely to scratch the surface. Damage to this product after installation is not covered by your warranty.

Never use hot water, solvents, commercial kitchen cleaners, aerosol cleaners, metal polishes, caustic or abrasive cleaners, or scourers to clean this appliance as they will damage it. Many commercially available cleaning products and detergents contain solvents that will damage your refrigerator. When cleaning, use only a soft cloth with an unscented mild soap and lukewarm water.

Cleaning the interior


You should clean the refrigerator interior regularly. It will be easiest to clean when the food supply is low. Wash the interior with a soft cloth and use an unscented mild soap with lukewarm water. Thoroughly dry all surfaces and removable parts. Avoid getting water on refrigerator controls. If you have taken out any removable parts, replace them and switch the power on before restocking the refrigerator with food. You should keep the interior of your refrigerator hygienic by promptly and thoroughly wiping up any food spills.

Cleaning the drip tray (ice and water models)

Water may accumulate in the sump located under the drip tray. If this occurs the sump can be sponged out to prevent water overflowing down the front of the door.

For cleaning the tray remove as described below:

1. Press down at the back of the drip tray with the tips of your fingers.
2. Pull the tray forward.
3. To refit, slide the drip tray back into position and push into place.

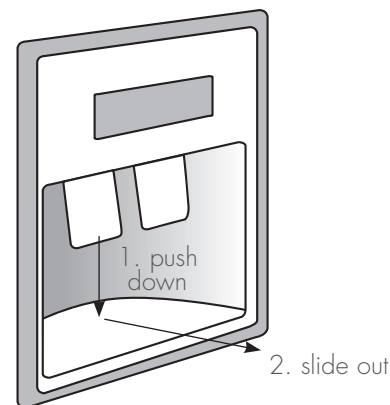

HELPFUL HINTS

Keep door seals clean

Take care to keep door seals clean. Sticky food and drink can cause seals to stick to the cabinet and tear when you open the door. Wash the seal with a mild detergent and warm water. Rinse thoroughly with clean water and dry.

HELPFUL HINTS FOR STORING FOOD

- ✓ Always buy the freshest, best quality food and put it in the refrigerator as soon as possible.
- ✓ Always cover food with plastic wrap or foil to stop it drying out and to help prevent bad smells.
- ✓ Always rinse and wrap fish and poultry before you put them in the refrigerator.
- ✓ Always remove stuffing from poultry before you put it in the refrigerator to minimise bacteria growth.
- ✓ Always store eggs in the refrigerator compartment with the pointed end down.
- ⊗ Never store bananas, avocados or mangoes in the refrigerator. This can cause them to go black or to go soft.
- ⊗ Never put hot or warm food in the refrigerator. Allow it to cool first.

Helpful hints for freezing food

You can use the freezer to store food which you buy in bulk when prices are low. You can also cook extra food and freeze it for later use.

- ✓ Buy the freshest, best quality food and put it in the freezer as soon as possible.
- ✓ Place food in plastic bags or plastic wrap before you put it in the freezer.
- ✓ Squeeze the air out of plastic bags as this prevents frost.
- ✓ When you buy frozen foods in the supermarket, keep them in their packaging when you store them.
- ✓ Defrost food, especially chicken and fish, in the refrigerator compartment. This stops bacteria from growing.
- ✓ Leave food in its wrapping while it defrosts.
- ✓ Use defrosted food immediately.
- ⊗ Never refreeze defrosted food.

The following guide will help you reduce the running cost of your new refrigerator. This will save you money and help conserve our valuable energy resources.

1. If you keep your old refrigerator, save power by switching it off when not in use.
2. Do not set your freezer temperature too low. After 24 hours, ice cream should be firm but able to be scooped out with a spoon without bending the handle. If ice cream is firmer than this (or too soft), adjust the freezer temperature controls (see 'Adjusting Temperature' in your relevant model section).
3. Ensure that the refrigerator doors seal properly as you close them.
4. Before you open the refrigerator doors, decide what you want to put in or take out. This will minimize the time you have the doors open.
5. It is best to have the refrigerator in a place that is out of direct sunlight and away from heating appliances of any kind. For example, do not place the refrigerator next to a cooker, fireplace, heater or dishwasher.
6. Allow hot foods to cool to room temperature before you put them in your freezer.
7. Thaw frozen food in the refrigerator section.
8. If you keep the freezer compartment filled to capacity, your food mass will help maintain the freezer temperature when you open the door.
9. Do not block air vents. Doing so may cause the refrigerator to run longer and use more energy.

TURNING OFF THE REFRIGERATOR

If you are leaving for a short holiday, there is no need to turn off your refrigerator – use vacation or eco mode (where applicable).

If you are going on a long holiday and want to turn the refrigerator off, follow the steps below.

1. Take all the food out of the refrigerator and freezer compartments.
2. Switch off the refrigerator and remove the electric cord from the power point.
3. Clean the inside.
4. Leave the doors open. This prevents bacteria from growing and causing smells in the refrigerator.

POWER FAILURE


If there is a power failure in your area, keep the door to the freezer closed. Most foods in your freezer will stay frozen for 24 hours.

If you think something may be wrong with your refrigerator, you can carry out some easy checks before calling for service. You may locate the problem, sparing yourself from inconvenience and saving time and money. Refer to the troubleshooting section on page 10.



FEATURES


COMPACT SIDE BY SIDE STANDARD FEATURES

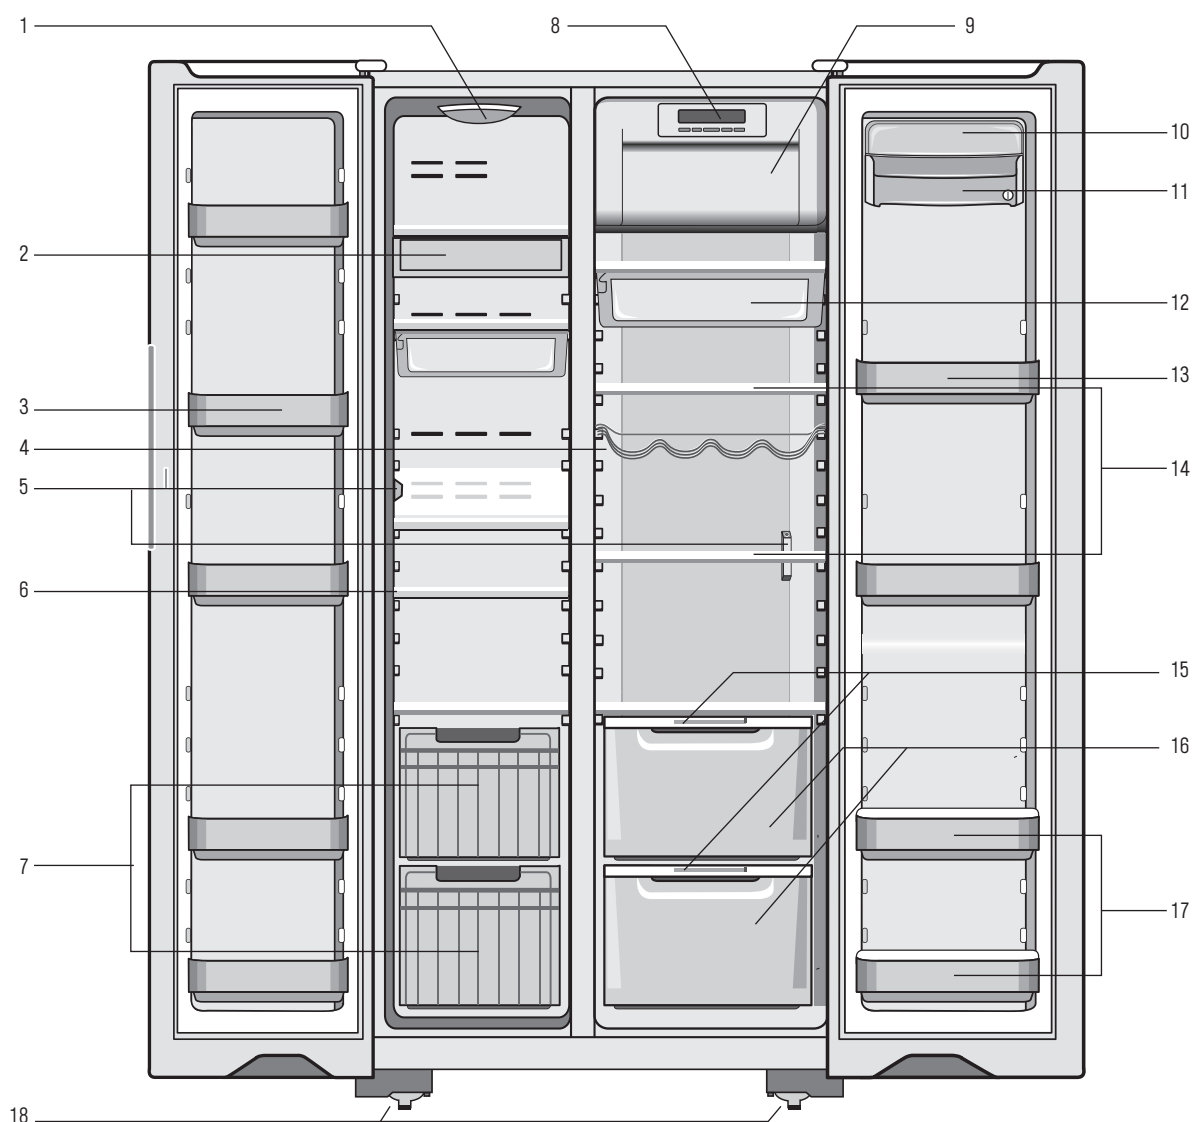

- | | | |
|------------------------------------|--|-----------------------------|
| 1 Freezer light | 8 Fridge & freezer temperature control | 14 Adjustable glass shelves |
| 2 Ice cube tray, lid & storage bin | 9 Light lens | 15 Humidity controls |
| 3 Freezer door bins | 10 Dairy compartment | 16 Crisper bins |
| 4 Wine rack | 11 Storesafe™ bin (lockable) | 17 Bottle bins |
| 5 Sensors | 12 Deli bin | 18 Adjustable rollers |
| 6 Glass shelves | 13 Door bins | |
| 7 Roll out freezer baskets | | |

Features may vary depending on model. Not all models will have features listed.

COMPACT SIDE BY SIDE ICE & WATER FEATURES

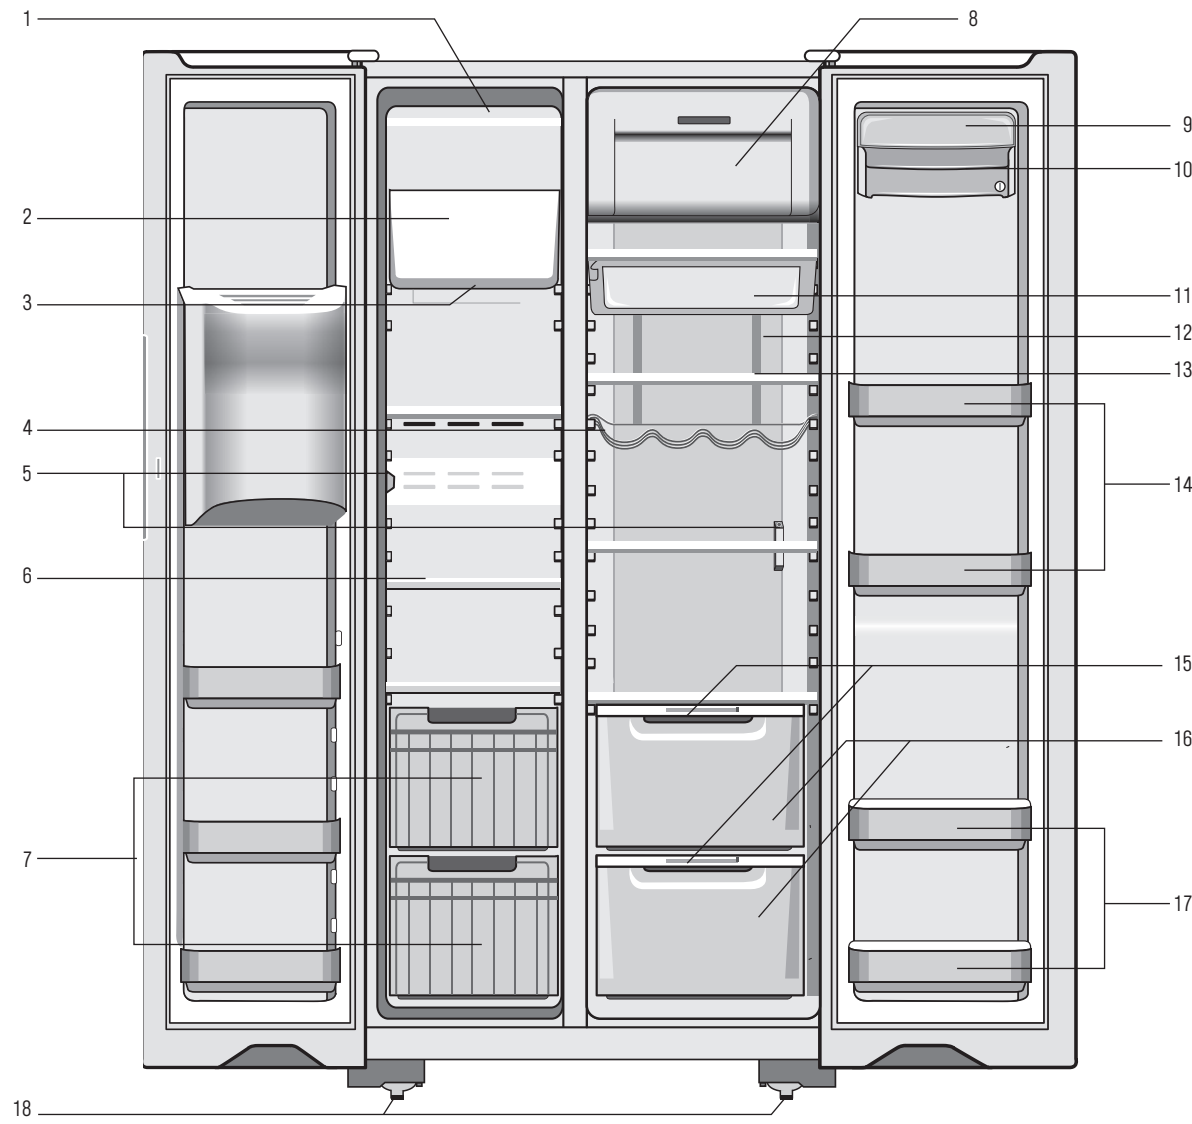

Ice & Water Door Dispenser



- | | | |
|-------------------|---|-----------------------------|
| 1 Ice cream shelf | 7 Roll out baskets | 13 Adjustable glass shelves |
| 2 Ice maker unit | 8 Light lens | 14 Adjustable door bins |
| 3 Lighting | 9 Dairy compartment | 15 Humidity controls |
| 4 Wine rack | 10 Storesafe™ bin (lockable) | 16 Crisper bins |
| 5 Sensors | 11 Deli bin | 17 Bottle bins |
| 6 Glass shelves | 12 Multiflow duct
(with blue feature lighting) | 18 Adjustable rollers |

Features may vary depending on model. Not all models will have features listed.

COMPACT SIDE BY SIDE

INSTALLING ICE & WATER MODELS

ICE AND WATER MODELS

The water connection to your ice and water product should only be done by a licensed refrigeration mechanic, plumber or electrician. All relevant information regarding the water connection is detailed in the water kit provided with your product for use by the professional installer only. The automatic ice and water dispenser needs a drinkable water supply with a pressure of:


- minimum 206 kPa (30 psi, 2.11 kgf/cm²)
- maximum 689 kPa (100 psi, 7.04 kgf/cm²)

In some areas local water pressure is significantly higher due to local conditions. In such areas a pressure reducing valve must be used. Ensure your plumber or installer checks your local water pressure when installing your refrigerator. If you are using your refrigerator for the first time, or if you have not used the dispenser for some time:

- discard the first seven or eight cups of water
- discard any ice that the ice maker produces in the first 24 hours (contaminants could have settled in the water pipes)

The water tap can be anywhere and there is no limit to the amount of pipe between the tap and the refrigerator, however, some points to note are:

1. It is better to have the tap accessible without having to roll the refrigerator forward, so we recommend putting it outside the cavity as shown by the stars in the diagram below.
2. It is recommended that the height of the tap should be 400mm from the ground.
3. If the refrigerator is required to be pulled forward for cleaning, the water pipe may need to be removed from the tap.


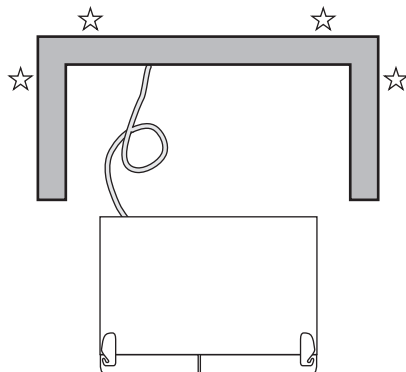


ICE MAKER START UP

The water connection to your ice and water product should only be done by a licensed refrigeration mechanic, plumber or electrician.


If the ice maker is not connected to a water supply, check that the ice maker is turned off. To do this remove the ice cream shelf and put the switch in the 'OFF' position. If you don't do this a loud buzzing noise will be heard intermittently if the icemaker is on but no water is being supplied. If the ice maker is connected to a water supply, check that the ice maker is turned on. To do this put the switch in the 'ON' position.

INITIAL START UP

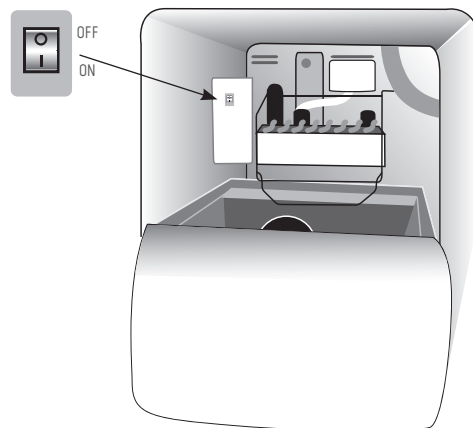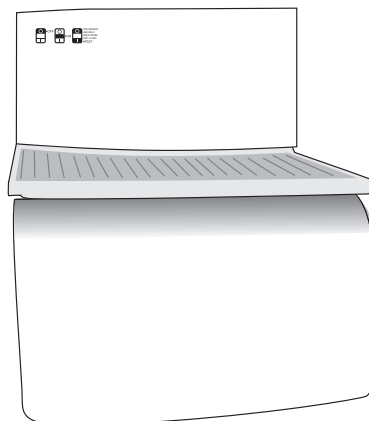

WARNING

Connect to potable water supply only. Do not use the ice chute as a handle when removing or replacing the ice storage bin. Do not put fingers up the ice chute. Surfaces there may be sharp.

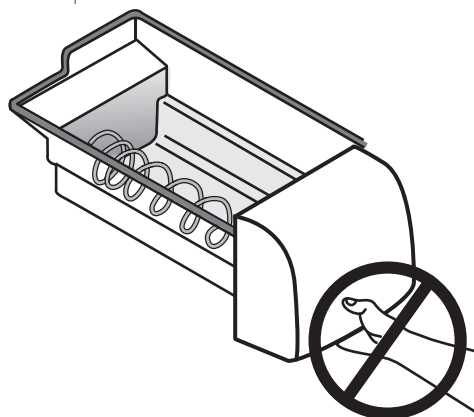

CHANGING THE WATER FILTER

If you purchased a refrigerator with an ice and water filter, please read the following care and use information.

INITIAL START UP

THE EXTERNAL WATER FILTER KIT

An external water filter and connection kit has been supplied for use with your Ice & Water refrigerator. The external filter design allows more space within the refrigerator and provides double the life of previous filters, reducing the cost of replacement. The filter is designed to significantly reduce chlorine, taste, odour, heavy metals, turbidity (cloudiness) and scale build up. The included plastic (LLDPE) water tube allows quick connection to the filter and is designed for high durability and kink resistance.


This filter is designed only to be used with a potable water supply. It should not be used on water that is microbiologically unsafe or with water of unknown quality. The filter should be replaced every 12 months. The service life of the filter may be reduced in water supplies that contain an excess of particles or other impurities. Reduced flow rate is an indication that a new filter is required. Failure to replace the filter when required can affect the function of the ice maker. Service calls caused by a failure to replace the filter are not covered by warranty.

To replace the Water Filter

The water filter is fitted with Super Speed fit Fittings for ease of installation and replacement. To replace the filter;

1. Turn off the water supply.
2. Release the pressure in the water lines by holding a container against the water dispenser paddle on the refrigerator until the pressure has been released.
3. Turn off the refrigerator at the power point and remove the plug from the socket or turn off the icemaker.
4. Depress the collet (see diagram below) and pull the tube out of each end of the filter.
5. Refit the tubes into the new filter to the stops (about 15mm). Ensure that you observe the flow direction. Write the fitment date in the space provided on the filter.
6. Gently pull back on the tube to ensure that it is secure.
7. Turn the water supply back on and check for leaks.
8. Plug the unit back in and turn the power supply back on to the refrigerator and ensure that the icemaker is turned back on.
9. Purge and dispose of approximately 5 litres of water through the water dispenser to condition the filter and clear the lines of impurities. It may take up to a minute to get a full flow of water from the dispenser. Do not be alarmed if there is an initial black colour to the water. This is residual carbon dust from the filter and is non-toxic.
10. Once the lines have been purged, dispose of the first few batches of ice to ensure that impurities have been flushed from this part of the system.

If the water is slow to shut off or the dispenser is dripping, this indicates that there may still be air in the lines. Either purge more water through the system to remove this air or allow some time for the air to be removed over subsequent dispensing.

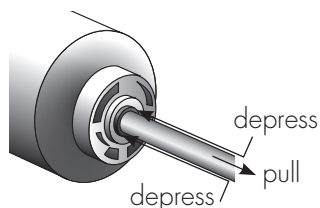


CARE & MAINTENANCE

CLEANING THE ICE DISPENSER

Clean the dispenser and ice container at regular intervals, particularly before you take a vacation or move, also clean the dispenser if it sticks.


To clean the dispenser:

1. Switch the ice maker switch to the "OFF" position.
2. Remove the ice container by lifting it up and out. Empty and carefully clean the container with mild detergent. Rinse carefully ensuring no traces of detergent remain. Do not use harsh or abrasive cleaners. Allow the ice container to dry completely before replacing it in the freezer.
3. Remove ice chips from the shelf and chute that support the ice container; clean these areas.
4. Replace the ice container. Ensure the wire arm sits within the ice cube container (see diagram below).
5. Turn the ice maker switch back to the "ON" position.

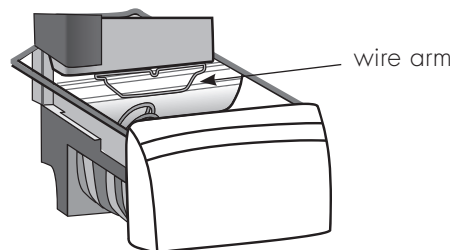

CAUTION

When removing or replacing the ice bin do not rotate the auger in the ice bin. If the auger is accidentally turned, you must realign the auger by turning it in 90° turns until the ice bin fits into place with the drive mechanism

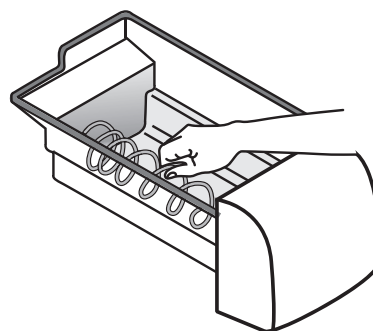

Remove and empty the ice storage bin if:

1. An extended power failure (one hour or longer) causes ice cubes in the ice storage bin to melt and freeze together and jam the dispenser mechanism.
2. If the ice dispenser is not used frequently, ice cubes will freeze together in the bin and jam the dispenser mechanism. If this happens remove the ice storage bin and shake it to loosen the cubes.

NEVER use an ice pick or similar sharp instrument to break up the ice. This could damage the ice storage bin and dispenser mechanism.




Westinghouse

COMPACT SIDE BY SIDE STANDARD

USING YOUR REFRIGERATOR

ELECTRONIC DISPLAY PANEL (STANDARD)

The electronic display panel is located at the top rear of the food storage compartment. It consists of an LCD display with blue lighting and 7 push buttons. When the power is first turned on, you will see the default settings shown below with the blue backlighting on.

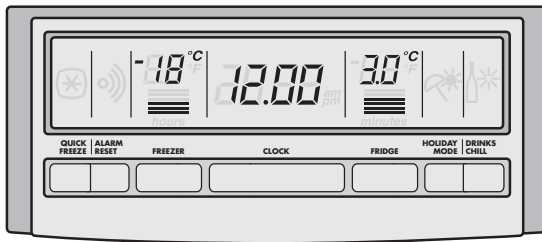

Adjusting temperatures

The default temperature for the refrigerator is 3°C, with a default of -18°C for the freezer. If you want to change the temperatures, use the instructions below. You should make only small adjustments and wait 24 hours to see whether further changes are required.

NOTE: The set temperature for the refrigerator is an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary depending on how much food you store and where you place it. High or low room temperature may also affect the actual temperature inside the refrigerator.


Changing the freezer temperature

Press the freezer button to make the freezer colder in 1°C steps. Once -23°C is reached the display will return to -14°C with the next button press. You'll notice that the bar graph gets smaller with colder freezer settings. If you set -14°C, the bar graph will flash continuously to warn that it is not cold enough for long term storage of frozen food.

Changing the refrigerator temperature

Press the fridge button to make the fridge colder in 1°C steps. Once 0.0°C is reached the display will return to 7°C with the next button press. The bar graph gets smaller with colder freezer settings.


NOTE: Testing ice cream is a good way to check the freezer. Testing drinking water is a good way to check the refrigerator compartment temperature.

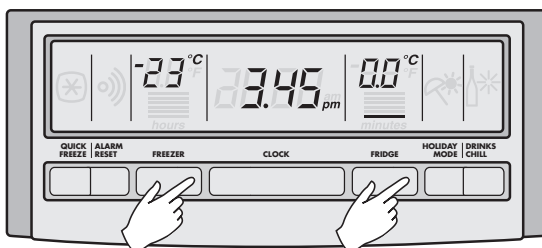

Turning the clock on and off

Press the clock button to turn the clock display on or off.

NOTE: The time still advances while the display is off.

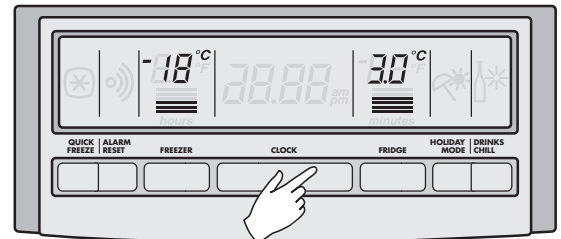


Setting the clock

1. Press and hold the clock button for two seconds. Hours and minutes will then appear on the display.



2. While holding down the clock button, press the freezer button to advance the hours. Hold the freezer button down for continuous and fast advance. After the first 12 hours the pm indicator will appear.

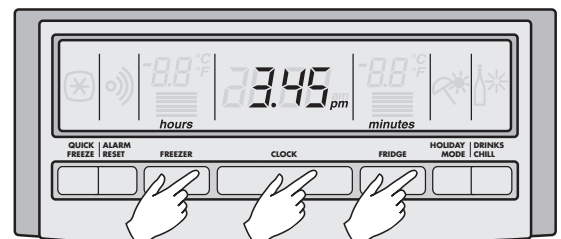

3. While holding down the clock button, press the fridge button to advance the minutes. Hold the fridge button down for continuous and fast advance.
4. When the correct time is displayed release the clock button.


Quick freeze function

Use the quick freeze function when you add a large amount of food to the freezer compartment. This freezes the food quickly but does not affect the temperature in the refrigerator compartment.

To use this function, press the quick freeze button once. An animated icon above the button will light up. The quick freeze function will now operate for 90 minutes. If you want to turn the quick freeze function off before 90 minutes have


USING YOUR REFRIGERATOR

passed, simply press the quick freeze button again. The icon will disappear and the refrigerator will return to normal operation.

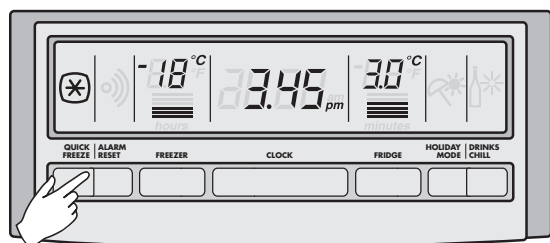


Holiday mode

Use the holiday mode when you go on holidays or leave the house for long periods. In holiday mode the refrigerator minimises defrosting to save energy but maintains your temperature settings. To put the refrigerator into holiday mode, press the holiday mode button once. An animated icon above the button will light up. The holiday mode will now operate until the button is pressed again or the refrigerator door is opened.

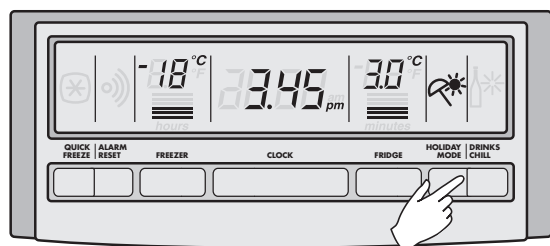

Door alarm


If the refrigerator door is left open for longer than 2 minutes a buzzer will sound and the icon above the alarm reset button will flash. The refrigerator temperature settings and bar graph will also flash. If the alarm is sounding for no apparent reason, check whether anything is holding the door open. Closing the door resets the alarm for a further 2 minutes. If you want to leave the door open while you load the fridge, you can turn the alarm off for 8 minutes by pressing the alarm reset button.

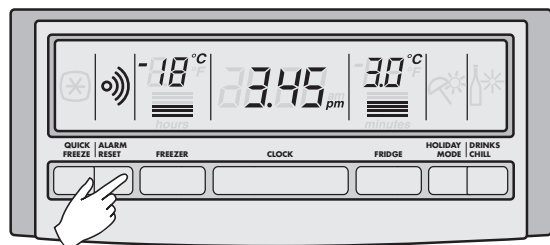

Freezer temperature alarm

If the freezer becomes too warm, a buzzer will sound and the icon above the Alarm Reset button, the freezer temperature and the bar graph will flash until the Alarm Reset button is pressed. After the Alarm Reset button has been pressed the freezer temperature setting and the bar graph will flash until normal operating temperatures are reached.

Check that the freezer door has not been left open or warm food has not been placed too close to the temperature sensor in the freezer. See diagram on page 12 for the sensor location. If the freezer is still too warm the alarm will sound again in 50 minutes, indicating that something may be wrong with your refrigerator.

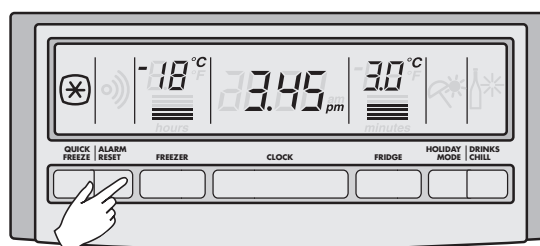


Drinks chill timer


If you set the drinks chill timer it will sound an alarm to remind you that you have left drinks in your freezer for quick chilling.

Suggested chilling times:

- 10 minutes for cans of drinks
- 20 minutes for bottles of wine
- 30 minutes for bottles of soft drink

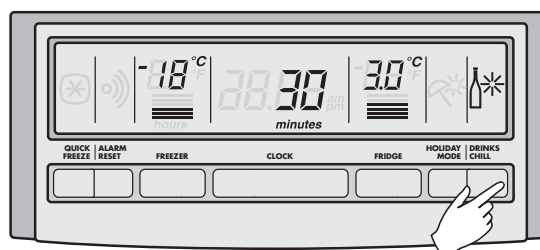

To use the timer, press the drinks chill button. An animated icon appears above the drinks chill button and the clock display is replaced by the countdown timer. Press the button once to set a 10 minute time limit, twice for 20 minutes and three times for 30 minutes. Press four times to turn the timer off. The timer will count down in 1 minute increments; you can change the timer or turn the timer off even after the countdown has started. When the countdown has finished a buzzer will sound and the icon above the alarm will flash until the alarm reset button is pressed. To stop the alarm and turn off the drinks chill timer, press the Alarm Reset button. If your drink is chilled, take it out of the freezer. If it is not cold enough, reset the drink chill function bearing in mind that the drink is already partially chilled.

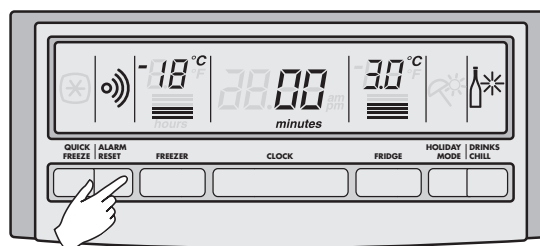

COMPACT SIDE BY SIDE

ICE & WATER

USING YOUR REFRIGERATOR

ELECTRONIC DISPLAY PANEL (ICE & WATER MODEL)

Setting the clock

1. Press and hold the clock button down for two seconds. Hours and minutes will then appear on the display.
2. Press the fast freeze button to advance the hours. Hold the fast freeze button down for continuous and fast advance.
3. Press the eco/vacation button to advance the minutes. Hold the button down for continuous and fast advance.
4. The clock can be switched between 24 hour or 12 hour formats by pressing the drinks chill button. In 12 hour format the indicator will switch between am and pm accordingly.
5. When the correct time is displayed, release the clock button.

Adjusting temperatures


The default temperature for the refrigerator is 3°C, with a default of -18°C for the freezer. If you want to change the temperatures, use the instructions below. You should make only small adjustments and wait 24 hours to see whether you need to make further changes.

TIPS & INFORMATION

When you set a temperature, you set an average temperature for the whole appliance cabinet. Temperatures inside each compartment may vary, depending on how much food you store and where you place it. High or low room temperature may also affect the actual temperature inside the appliance.


Changing the freezer temperature

Press the freezer button to make the freezer colder in 1°C steps. Once -23°C is reached the display will return to -14°C with the next button press. You'll notice that the bar graph gets smaller with colder freezer settings.

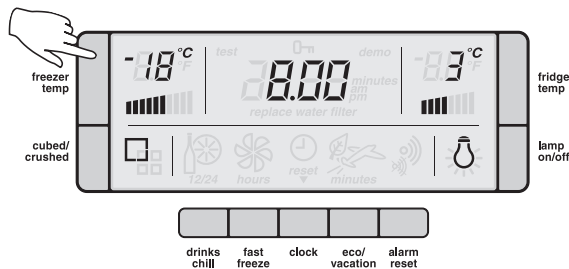

Changing the refrigerator temperature


Press the fridge button to make the fridge colder in 1°C steps. Once 0°C is reached the display will return to 7°C with the next button press. The bar graph gets smaller with colder settings.

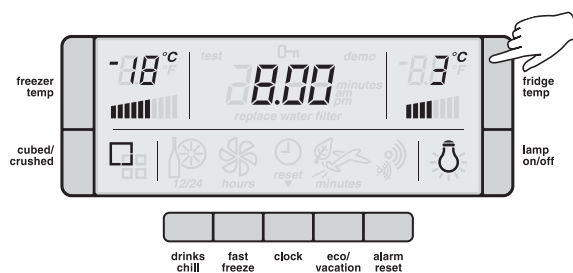

Fast freeze function


Use the fast freeze function when you add a large amount of food to the freezer compartment. This freezes the food quickly but does not affect the temperature in the refrigerator compartment.

To use this function, press the fast freeze button once. An animated icon will light up. The fast freeze function will now operate for 90 minutes. If you want to turn the fast freeze function off before 90 minutes have passed, simply press the fast freeze button again. The icon will disappear and the freezer will return to normal operation.

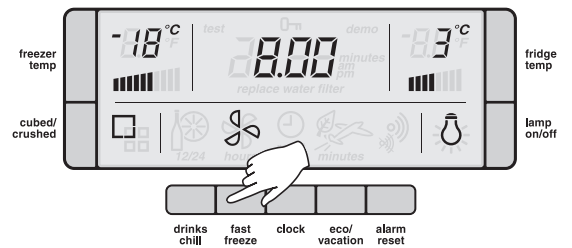

Freezer temperature alarm

If the freezer becomes too warm due to the freezer door being left open or warm food being placed too close to the temperature sensor in the freezer (see diagrams on page 13 for the sensor location), a buzzer will sound. The icon adjacent to the alarm reset button or above the alarm reset button, the freezer set temperature and the bar graph will all flash until the alarm reset button is pressed. Once pressed, the alarm disable icon will illuminate for 50 minutes, or until the temperature reaches an acceptable level.

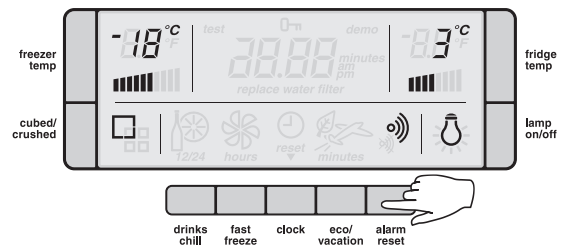


Make sure nothing is holding the freezer door open and move any warm food away from the temperature sensor (see diagrams on page 13). If the freezer is still too warm after 50 minutes the alarm will sound again, indicating that something may be wrong with your appliance.

NOTE: The freezer temperature alarm can be reset for 12 hours by pressing the alarm reset button continuously for 10 seconds.

USING YOUR REFRIGERATOR


Door alarm

If the refrigerator door is left open for longer than 2 minutes a buzzer will sound and the icon above the alarm reset button will flash. The refrigerator temperature settings and bar graph will also flash. If the alarm is sounding for no apparent reason, check whether anything is holding the door open. Closing the door resets the alarm for a further 2 minutes. If you want to leave the door open while you load the fridge, you can turn the alarm off for 8 minutes by pressing the alarm reset button.

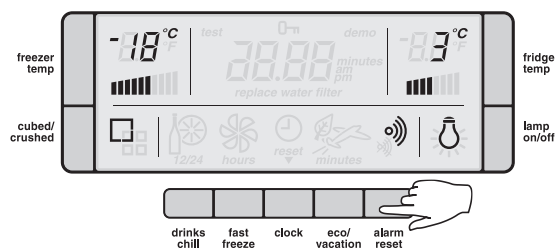

Child lock


To activate the child lock, press and hold the lamp on/off and cubed/crushed buttons together. This will disable the display to prevent accidental changes to settings. The key icon will appear on the electronic display when child lock is activated. To turn off the child lock press and hold the lamp on/off and cubed/crushed buttons together.

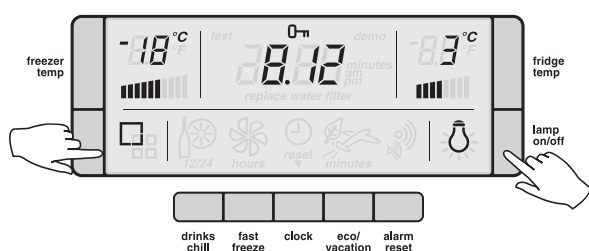

Drinks chill timer

If you set the drinks chill timer it will sound an alarm to remind you that you have left drinks in your freezer for quick chilling.

To use the timer, press the drinks chill button to increase the timer in 5 minute increments. Pressing the button again after 30 minutes is reached will turn the timer off.

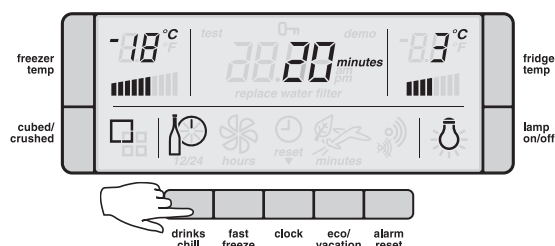

Suggested chilling times:

- 10 minutes for cans of drink
- 20 minutes for bottles of wine
- 30 minutes for bottles of soft drink


When you press the drinks chill button, an animated icon will appear above the drinks chill button with a countdown timer. The timer will count down in 1 minute increments; you can change the time or turn the timer off even after the countdown has started. When the countdown is finished a buzzer will sound and the icon beside the alarm will flash until the alarm reset button is pressed.

To stop the alarm and turn off the drinks chill timer, press the Alarm reset button. If your drink is chilled, take it out of the freezer. If it is not cold enough, reset the drinks chill function (remembering that the drink is already partially chilled).

Energy efficiency

Your appliance has been designed with energy efficiency in mind and can operate in any of three modes (normal, eco, vacation), depending on the level of efficiency sought.

- **Normal mode**
This is the mode which is entered automatically when the appliance is first turned on. Normal mode is the mode most suitable when the refrigerator door is opened often.
- **Eco mode**
Eco mode is a more efficient mode than normal mode and can be entered in two ways. Either by manually pressing the eco / vacation button once when in normal mode, or automatically after 30 hours if the refrigerator door has not been opened. The leaf icon will appear on the electronic display when eco mode is activated. If eco mode is entered automatically, the appliance will revert to normal mode once the refrigerator door is opened. If eco mode is entered manually, door openings will not cause the display to revert to normal mode. To exit eco mode, press the eco / vacation button twice (or until there are no icons displayed).

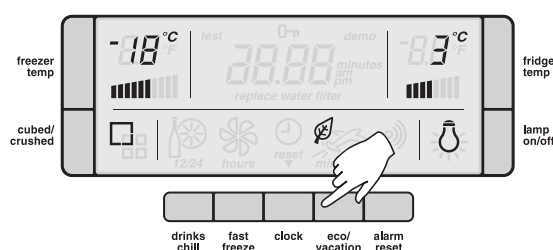

CAUTION

Eco mode is designed to operate with minimum door opening (e.g. if used as a long term storage fridge). If turned on manually, it won't switch off automatically and frequent door opening in eco mode could lead to food spoilage. If frequent door opening is likely to occur switch back to normal mode.

COMPACT SIDE BY SIDE


ICE & WATER

USING YOUR REFRIGERATOR

ELECTRONIC DISPLAY PANEL (ICE & WATER MODEL)

- **Vacation (holiday) mode**
Vacation mode is suitable if you will be away from your appliance for an extended period. To take advantage of maximum efficiency press the eco/vacation button twice in succession just before you leave—do this while in normal mode. The appliance will then enter vacation mode, as indicated by the aeroplane symbol. Press eco/vacation button again to cycle between 'normal', 'eco' and 'vacation' modes. If in eco mode a single button press is all that is required to enter vacation mode.

Vacation mode is exited automatically once the refrigerator door is opened and normal mode resumes.

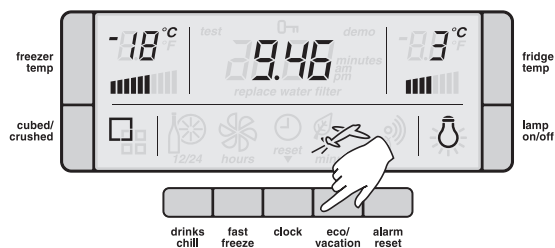

ENVIRONMENTAL TIPS

Eco and vacation modes minimise defrosting to save energy, while maintaining your temperature settings.

NOTE: Opening the freezer door has no effect on the operation of Eco and Vacation Modes

Other electronic features

Your refrigerator:

- controls the compressor and fan independently to provide the best performance
- provides extra cooling depending on the number of door openings
- automatically defrosts during periods when the door is not being opened frequently
- has a 90 second memory backup on the display so that the time and settings are not lost during short power interruptions




TIPS & INFORMATION

If you find that the display malfunctions, this may be due to brief power supply interruptions. If this is the problem, you simply need to turn the refrigerator off at the power point and wait 5 minutes, then turn the refrigerator on again at the power point.

ICE AND WATER DISPENSER FEATURES

The ice and water dispenser conveniently dispenses cool, filtered water and ice cubes or crushed ice. To operate the ice dispenser, select an ice option using the electronic display.

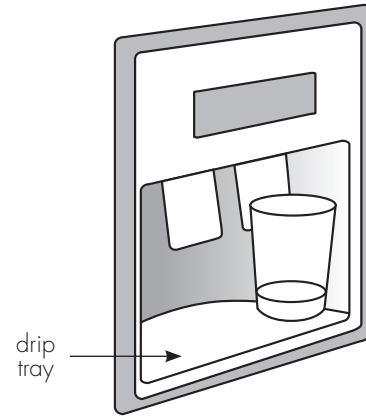

Press a glass against the dispensing paddle. Hold the top of the glass as close as possible to the ice outlet, so that you will catch all the ice. To stop dispensing ice, pull the glass away from the dispensing paddle. Do not remove the glass until the ice has finished coming out.

To operate the water dispenser, press a glass against the dispensing paddle. To stop dispensing water, pull the glass away from the dispensing paddle. A drip tray located at the base of the dispenser (see diagram above) will catch small spills and allow them to evaporate. The drip tray is removable and dishwasher safe.



CAUTION

Do not pour water or excess cubes into the drip tray because it is not connected to a drain.

Dispenser lamp

The dispenser has a light which can be turned on and off by pressing the Lamp button on the electronic display (see diagram below). The lamp is also activated for 6 seconds whenever a dispensing paddle is pressed. The light comes from 6 ultra bright LEDs (light emitting diodes), which are part of the electronic display. These are designed to last the life of the refrigerator and are not customer replaceable. The same technology is used in the interior multiflow duct (blue strip lights).



USING YOUR REFRIGERATOR

HOW THE WATER DISPENSER WORKS

After the refrigerator is connected to the water supply, fill the water tank by holding a glass against the dispenser paddle. You may need to hold the glass against the paddle for up to 2 minutes before water begins to flow. Continue to draw water for a further 3 minutes to rid the tank and plumbing connections of any impurities, the tank will automatically refill as you dispense water.



CAUTION

Remember, do not drink this water as it may have impurities in it!



TIPS & INFORMATION

The water connection to your ice and water product should only be done by a licensed refrigeration mechanic, plumber or electrician.

The water dispenser water tank is located behind the upper crisper bin in the refrigerator compartment.

Normal Operation—For cool water, add ice.

To provide the convenience of filtered water in the same location as the ice dispenser, it is necessary to route the tubes from the refrigerator compartment. This means the first half glass of water will not be quite as cold as the following 3 or 4 glasses. If you require cool water from the first glass, we recommend that you first add crushed or cubed ice to your glass then the water. In times of high use, water may be dispensed before it has time to cool. Once this occurs, the dispensed water temperature will be similar to that of your normal tap water until the tank has had a chance to re-cool. The addition of cubed or crushed ice will allow you to still enjoy cool water should this occur.



CAUTION

Chemicals from a malfunctioning softener can damage the ice maker. If the ice maker is connected to soft water, ensure that the softener is maintained and working properly.

HOW THE ICE DISPENSER WORKS

The ice maker and ice container are located in the top of the freezer compartment. After the refrigerator is installed properly and has cooled for several hours, the ice maker can begin making ice and the first batch will be ready within 24 hours. A full tray of ice may not be created for the first few batches, due to air in the refrigerator's new plumbing lines. To begin ice production, switch the switch to the ON position. If no ice is dispensed it will take about 2 days to fill the storage container. The ice maker turns off automatically when the ice container is full. To stop ice production, turn the switch to the OFF position (see diagram on page 14). The first batches of ice cubes may be discoloured or have an odd flavour, due to the refrigerator's new plumbing connections. Discard this ice until batches are free of discolouration or taste problems.

NOTE: If the water filter is not in place or suitably bypassed, the ice maker will not produce any ice.



TIPS & INFORMATION

- Ice cubes stored too long may develop an odd flavour. Remove the ice container and discard the ice cubes. When replacing the tray, ensure that the wire signal arm (see diagram on page 15) sits within the ice cube container. The ice maker will then start producing ice.
- Occasionally shake the ice container to keep ice separated.
- After you take delivery of the refrigerator, keep the ice maker switch in the OFF position until the refrigerator is connected to the water supply. The switch should also be kept in the OFF position whenever the water supply is turned off.



CAUTION

If the dispensing paddle is pushed for more than 4 minutes, the dispenser motor may overload and stop. The overload protector will reset automatically after 3 or 4 minutes.

- If a large quantity of ice is needed at one time, it is best to remove cubes directly from the ice cube container
- When the ice maker is operating, it is normal to hear the sound of:
 - the motor running.
 - ice dropping into the ice container.
 - the water valve opening or closing.
 - ice loosening in the tray.
 - running water.



COMPACT SIDE BY SIDE

USING YOUR REFRIGERATOR

OTHER ELECTRONIC FEATURES OF YOUR STANDARD AND ICE & WATER REFRIGERATOR

Your refrigerator:

- controls the compressor and fan independently to provide the best performance
- provides extra cooling depending on the number of door openings
- automatically defrosts during periods when the door is not being opened frequently
- has a 90 second memory backup on the display so that the time and settings are not lost during short power interruptions
- has blue feature lighting activated by opening the refrigerator door (ice and water models only)

NOTE: If you find that the display malfunctions, this may be due to brief power supply interruptions. If this occurs you simply need to turn the refrigerator off at the power point and wait 5 minutes for the refrigerator pressure to equalise then turn the refrigerator on again at the power point.

FOOD COMPARTMENT FEATURES


Door storage bins

Both the refrigerator and freezer have door storage bins. You can adjust the door bins to meet different storage needs. All the door bins are completely removable for cleaning. If you want to remove or adjust a bin, lift it over the support lugs on the inner door panel. Push the bin down over the support lugs to lock it in place.

Store safe compartment

The store safe compartment is a coin-lockable compartment. To lock, rotate the coin slot anti-clockwise until the slot is horizontal. To unlock, turn the coin slot clockwise until the slot is vertical.


To open the drawer, push the tab down with your thumb and pull the drawer forward.

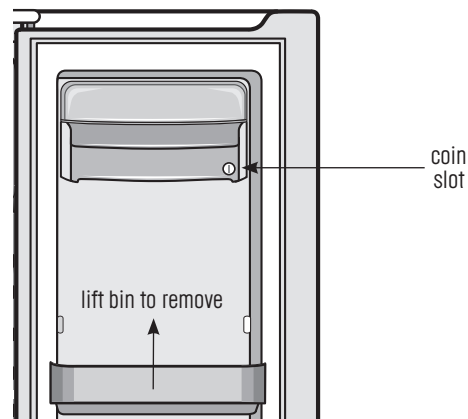

NOTE: The locker compartment can be removed and positioned on other levels as well.


Deli compartment

The deli compartment is an ideal place to keep deli items, such as cold meats. Additional cold air is directed into the deli compartment, keeping the contents fresher for longer. It can also be used for faster chilling of food or drinks. To remove the deli compartment, pull forward, then up and forward.

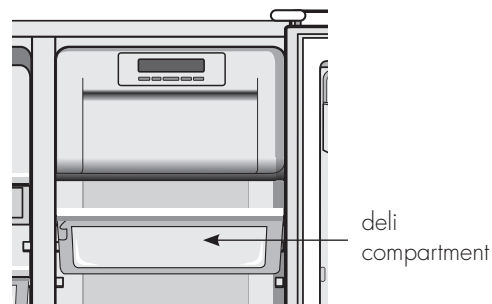

Crisper bin(s)

- Storing vegetables
You can use the crisper bin to store vegetables, fruit or smallgoods. You can change the humidity inside the bin by sliding the humidity control.

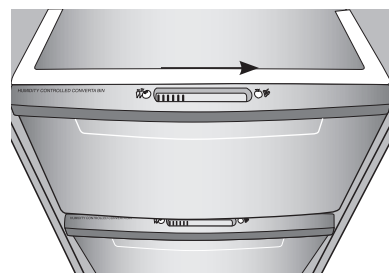

You should store vegetables in the crisper bin remembering to set the humidity control to more humid (closed).

- Storing fruit & smallgoods
You can also store fruit & smallgoods in the crisper bin remembering to set the humidity control to less humid (open).
- Crisper bin removal
Remove the crisper bin(s) by pulling forward, then up and forward.


USING YOUR REFRIGERATOR

Slide out glass shelves

To make access to your food easier, both the refrigerator and freezer compartments are fitted with glass shelves.


To remove the shelves, gently pull them forward until the shelf comes to a stop. Lift the shelf slightly to clear the stop and continue pulling the shelf forward.

To return the shelf, make sure there is nothing behind it that may obstruct movement and gently push the shelf into the cabinet. It should slide back over the stops into its original position.

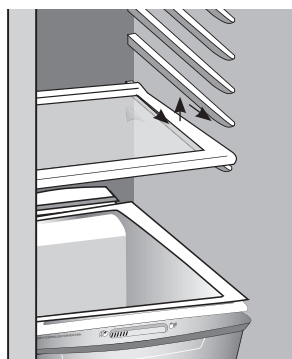

Freezer baskets

Freezer baskets and freezer shelves are fitted to freezer compartments. Wire baskets are used to provide easy visibility of the contents. All the baskets and the shelves pull out for easy access and have a stop to prevent the baskets and shelves being pulled out too far.

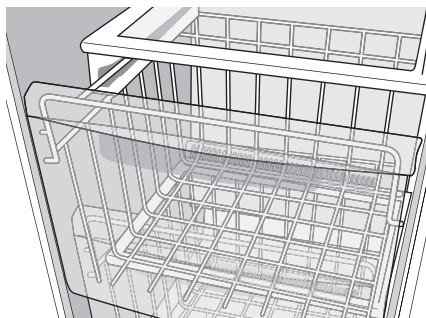


To remove the basket, pull it out until it hits the stop then lift the front to unhook the stop while continuing to pull forward, until the basket is free of the runners under the shelf.



CHANGING THE LIGHT BULBS ON YOUR REFRIGERATOR

To change the food compartment light bulb:

1. Check your temperature settings and write them down.
2. Switch the refrigerator off at the wall and remove plug from power point.
3. Unclip the light lens by inserting your fingers under the light lens, lifting until the light lens is clear of the housing.

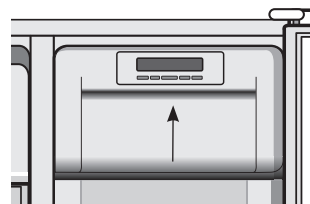


lift lens and remove

4. Unscrew the light bulb.
5. Replace the light bulb with a bulb of the same type and wattage.
6. Replace the light lens by inserting the tabs on the top of the light lens into the frame and pushing the bottom of the lens in with both hands.
7. Turn the refrigerator back on and reset your temperature to the previous settings (see the section on 'Adjusting Temperatures'.


To change the freezer compartment light bulb (ice & water models):

1. Check your temperature settings and write them down.
2. Switch the refrigerator off at the wall and remove plug from power point.
3. Unscrew the light bulb and replace with a bulb of the same type and wattage.
4. Turn the refrigerator back on and reset your temperature to your previous settings.

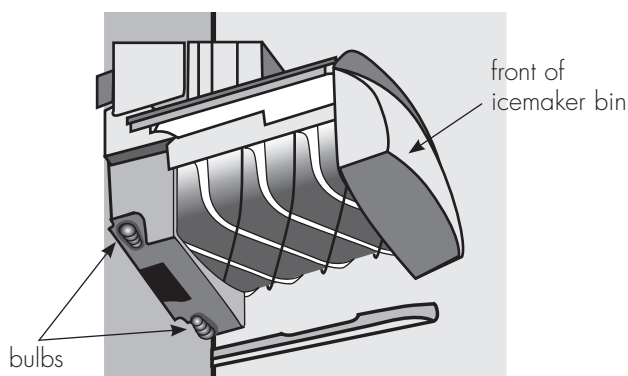

FEATURES


CLASSIC SIDE BY SIDE STANDARD

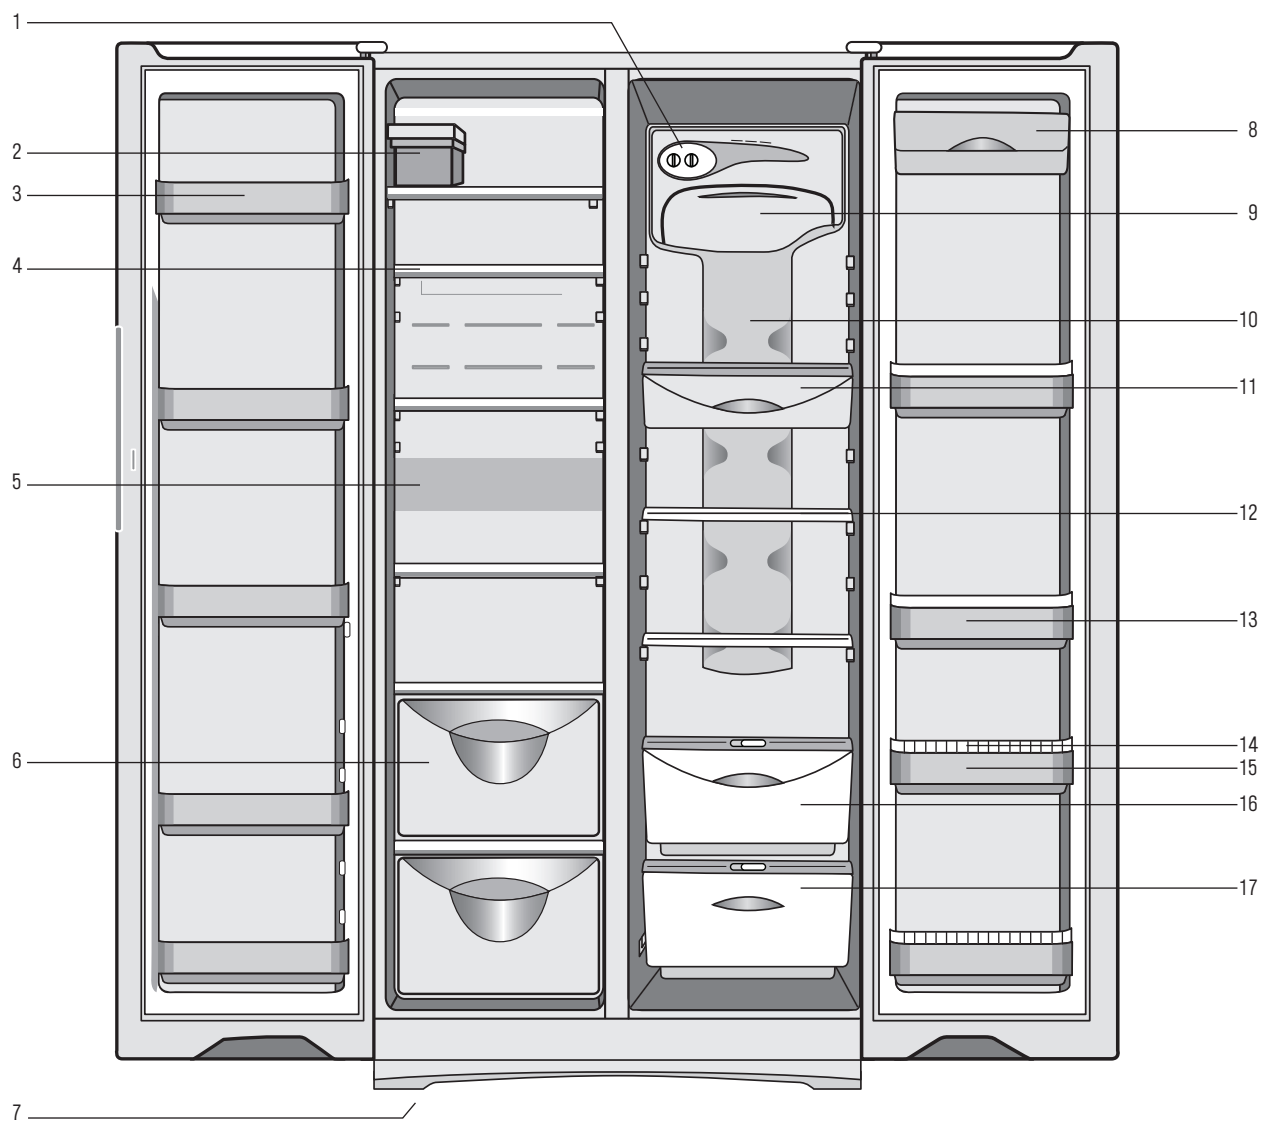

- | | | |
|---------------------------------------|-----------------------------|-------------------------|
| 1 Fridge/freezer temperature controls | 7 Air grille | 13 Adjustable door bins |
| 2 Ice cube tray, lid and storage box | 8 Dairy compartment | 14 Bottle restrainer |
| 3 Freezer door bins | 9 Light lens | 15 Bottle shelf |
| 4 Wire shelves | 10 Multi flow air outlets | 16 Crisper bin |
| 5 Light lens | 11 Deli bin | 17 Crisper/chilled bin |
| 6 Slide out baskets | 12 Adjustable glass shelves | |

Features may vary depending on model. Not all models will have features listed.

CLASSIC SIDE BY SIDE ICE & WATER

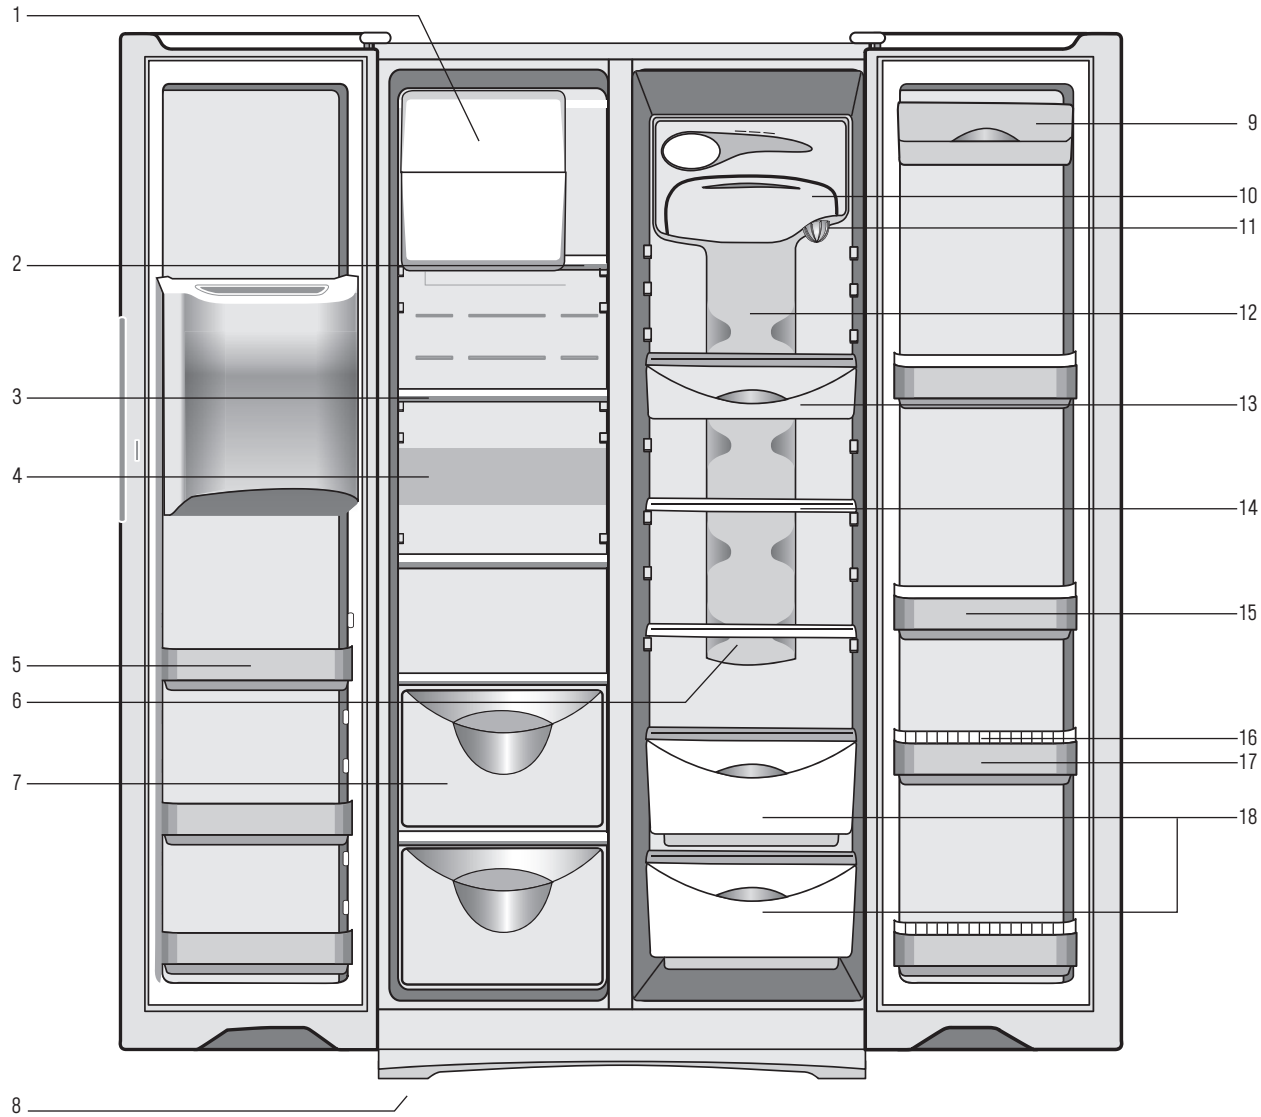

- | | | |
|-----------------------|---------------------------|-----------------------------|
| 1 Ice maker unit | 7 Slide out baskets | 13 Deli bin |
| 2 Pizza storage shelf | 8 Air grille | 14 Adjustable glass shelves |
| 3 Wire shelves | 9 Dairy compartment | 15 Adjustable door bins |
| 4 Light lens | 10 Light lens | 16 Bottle restrainer |
| 5 Freezer door bins | 11 Water filter | 17 Bottle shelf |
| 6 Sensor location | 12 Multi flow air outlets | 18 Crisper/chilled bin |


Features may vary depending on model. Not all models will have features listed.

CLASSIC SIDE BY SIDE


GENERAL INSTALLATION

ADJUSTING THE ROLLERS

To adjust the rollers you must first remove the air grille by rotating it upwards.

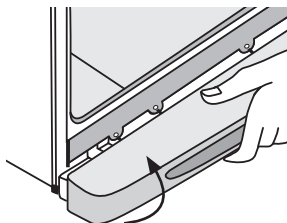

Pull the air grille forward to disengage the spring steel clips that mount the air grille to the refrigerator. You will then be able to see the roller nut and adjust the rollers as per instructions on page 5.

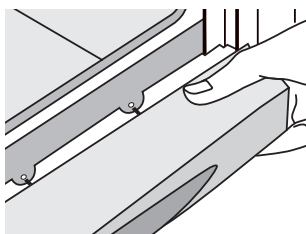

Once the refrigerator is level and the doors are aligned, refit the air grille:

- line the spring clips up with the slots at the base of the refrigerator
- to ensure that the grille is in position, strike it firmly with your hand to fully engage the steel spring clips

ICE AND WATER MODELS

The water connection to your ice and water product should only be done by a licensed refrigeration mechanic, plumber or electrician. All relevant information regarding the water connection is detailed in the water kit provided with your product for use by the professional installer only.



WARNING

Connect to potable water supply only.

The automatic ice and water dispenser needs a drinkable water supply with a pressure of:


- minimum 206 kPa (30 psi, 2.11 kgf/cm³)
- maximum 689 kPa (100 psi, 7.04 kgf/cm³)

In some areas local water pressure is significantly higher due to local conditions. In such areas a pressure reducing valve must be used. Ensure your plumber or installer checks your local water pressure when installing your refrigerator. If you are using your refrigerator for the first time, or if you have not used the dispenser for some time:

- discard the first seven or eight cups of water
- discard any ice that the ice maker produces in the first 24 hours (contaminants could have settled in the water pipes)

The water tap can be anywhere and there is no limit to the amount of pipe between the tap and the refrigerator, however some points to note are:

1. It is better to have the tap accessible without having to roll the refrigerator forward, so we recommend putting it outside the cavity as shown by the stars in the diagram below.
2. The height of the tap does not matter, but for new installations, position it 400mm from the ground.
3. If the refrigerator is required to be pulled forward for cleaning, the water pipe may need to be removed from the tap.

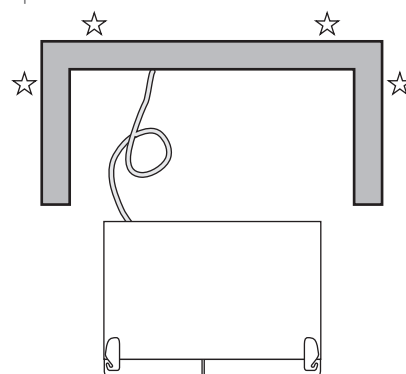


INITIAL START-UP

ICE MAKER START UP

If the ice maker is not connected to a water supply, ensure that the ice maker is turned off. To do this, remove the ice bucket by lifting it up and out then check that the wire signal arm is in the horizontal (OFF) position. If not, raise the wire signal arm so that it stays in the horizontal position.


NOTE: The arm will not stay up if it is not horizontal.

If the ice maker is connected to a water supply, ensure that the ice maker is turned on. To do this, remove the ice bucket by lifting it up and out then lower the wire signal arm down to the ON position.

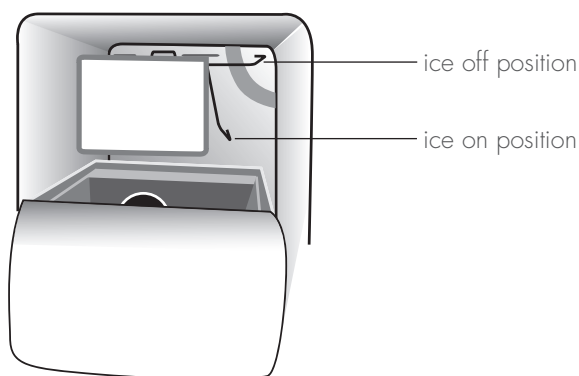

WARNING

Do not use the ice chute as a handle when removing or replacing the ice storage bin. Do not put fingers up the ice chute. Surfaces there may be sharp.

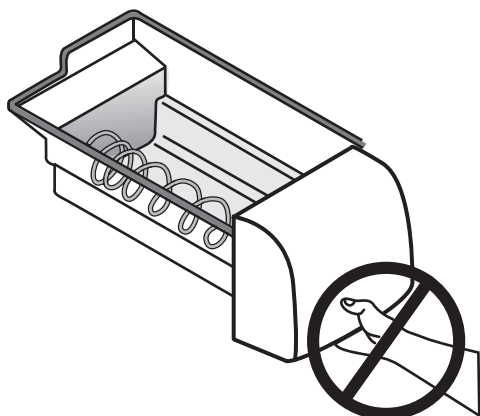

CARE & MAINTENANCE

CLEANING THE ICE DISPENSER


Clean the dispenser and ice container at regular intervals, particularly before you take a vacation or move, also clean the dispenser if it sticks.

To clean the dispenser:

1. Switch the ice maker off by putting the wire signal arm in the horizontal position.
2. Remove the ice container by lifting it up and out. Empty and carefully clean the container with mild detergent. Rinse carefully ensuring no traces of detergent remain. Do not use harsh or abrasive cleaners. Allow the ice container to dry completely before replacing it in the freezer.
3. Remove ice chips from the shelf and chute that support the ice container; clean these areas.
4. Replace the ice container.
5. Turn the ice maker on by moving the wire signal arm.


CAUTION

When removing or replacing the ice bin do not rotate the auger in the ice bin. If the auger is accidentally turned, you must realign the auger by turning it in 90° turns until the ice bin fits into place with the drive mechanism

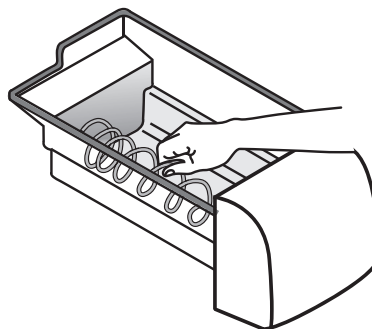

REMOVE AND EMPTY THE ICE STORAGE BIN IF:

1. An extended power failure (one hour or longer) causes ice cubes in the ice storage bin to melt and freeze together and jam the dispenser mechanism.
2. If the ice dispenser is not used frequently, ice cubes will freeze together in the bin and jam the dispenser mechanism. If this happens remove the ice storage bin and shake it to loosen the cubes.

 NEVER use an ice pick or similar sharp instrument to break up the ice. This could damage the ice storage bin and dispenser mechanism.


CLASSIC SIDE BY SIDE

USING YOUR REFRIGERATOR

ADJUSTING TEMPERATURES – MANUAL MODEL

Using the manual (rotary) controls

You need to adjust the temperature of your refrigerator and freezer to your climate. The two temperature control knobs are located in the top of the refrigerator compartment.

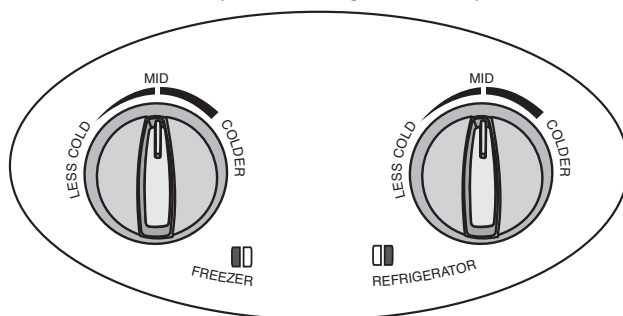

The left hand knob controls:

- The temperature of the freezer
- The quantity of air going into both compartments


The right hand knob controls:

- The temperature of the refrigerator

Note: Setting both controls to 'colder' when you first start will not cool your refrigerator any faster than when set at 'MID' settings. It is therefore NOT recommended. In general follow recommended procedures when you adjust temperatures.

Refrigerator temperature control:


To make the fridge/fresh food section colder, turn the knob clockwise slightly towards COLDER. To make the fridge/fresh food section warmer, turn the knob anticlockwise slightly towards LESS COLD.

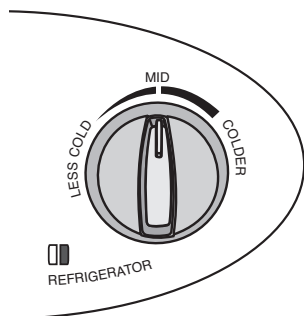

Note: The temperature control will also alter the temperature of the freezer. Allow the refrigerator to run for 24 hours after you alter the temperature control then reassess the temperature before making any further adjustments.

Freezer temperature control:

To make the freezer food section colder, turn the knob clockwise slightly towards COLDER. To make the freezer food section warmer, turn the knob anticlockwise slightly towards LESS COLD.

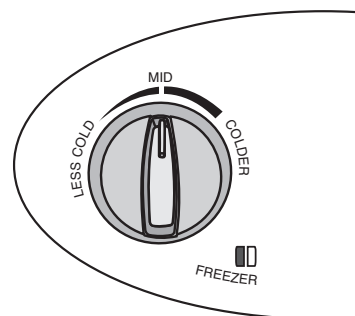

Note: The temperature control will also alter the temperature of the refrigerator. Allow the refrigerator to run for 24 hours after you alter the temperature control then reassess the temperature before making any further adjustments.




CAUTION

The coldest freezer setting is not recommended in warm and very hot climates as it will limit the cooling air to the refrigerator compartment.

ELECTRONIC DISPLAY PANEL (ICE & WATER MODEL)

The electronic display panel is located at the top of the food storage door. It consists of an LCD display with blue lighting and 7 push buttons. When the power is first turned on, you will see the default settings shown below with the blue backlighting on.

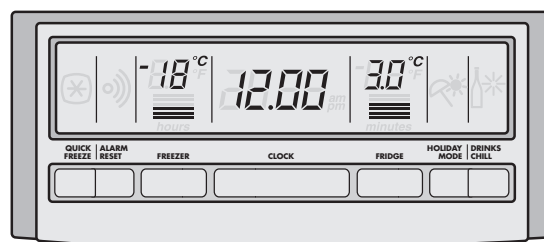

If no buttons have been pressed and the fridge door is closed the backlighting will turn off after 30 seconds. The display will go into clock mode.



When the display is in clock mode you can view the

USING YOUR REFRIGERATOR

refrigerator settings by pressing the freezer, clock or fridge button once. This reactivates the full display showing the temperature settings. Opening the fridge door also activates the full display. However, the display will return to clock mode 30 seconds after the last button press or the closing of the refrigerator door.

Setting the clock

1. Press and hold the clock button for two seconds. Hours and minutes will then appear on the display.



2. While holding down the clock button, press the freezer button to advance the hours. (Hold the freezer button down for continuous and fast advance). After the first 12 hours the pm indicator will appear.




3. While holding down the clock button, press the fridge button to advance the minutes. (Hold the fridge button down for continuous and fast advance).
4. When the correct time is displayed release the clock button.

Turning the clock on and off

Press the clock button to turn the clock display on or off.

NOTE: The time still advances while the display is off.

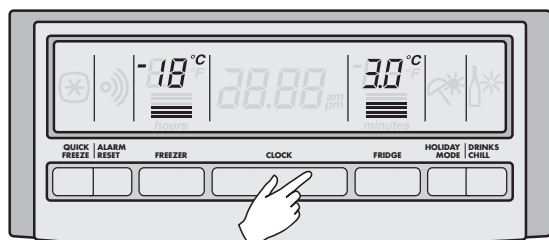

Adjusting temperatures

The default temperature for the refrigerator is 3°C, with a default of -18°C for the freezer. If you want to change the temperatures, use the instructions below. You should make

only small adjustments and wait 24 hours to see whether further changes are required.

NOTE: The set temperature for the refrigerator is an average temperature for the whole refrigerator cabinet. Temperatures inside each compartment may vary depending on how much food you store and where you place it. High or low room temperature may also affect the actual temperature inside the refrigerator.


Changing the freezer temperature

Press the freezer button to make the freezer colder in 1°C steps. Once -23°C is reached the display will return to -14°C with the next button press. You'll notice that the bar graph gets smaller with colder freezer settings. If you set -14°C, the bar graph will flash continuously to warn that it is not cold enough for long term storage of frozen food.

Changing the refrigerator temperature

Press the fridge button to make the fridge colder in 1°C steps. Once 0.0°C is reached the display will return to 7°C with the next button press. The bar graph gets smaller with colder freezer settings.


NOTE: Testing ice cream is a good way to check the freezer. Testing drinking water is a good way to check the refrigerator compartment temperature.

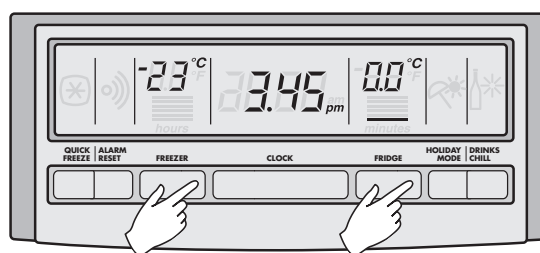

Quick freeze function

Use the quick freeze function when you add a large amount of food to the freezer compartment. This freezes the food quickly but does not affect the temperature in the refrigerator compartment.

To use this function, press the quick freeze button once. An animated icon above the button will light up. The quick freeze function will now operate for 90 minutes. If you want to turn the quick freeze function off before 90 minutes have passed, simply press the quick freeze button again. The icon will disappear and the refrigerator will return to normal operation.

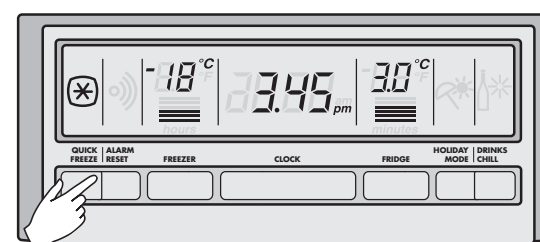


Westinghouse

CLASSIC SIDE BY SIDE

USING YOUR REFRIGERATOR


Holiday mode

Use the holiday mode when you go on holidays or leave the house for long periods. In holiday mode the refrigerator minimises defrosting to save energy but maintains your temperature settings. To put the refrigerator into holiday mode, press the holiday mode button once. An animated icon above the button will light up. The holiday mode will now operate until the button is pressed again or the refrigerator door is opened.

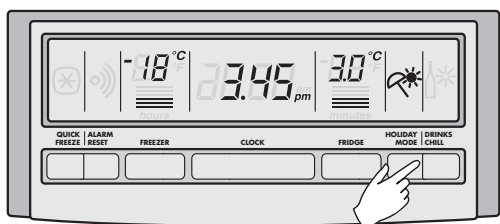

Door alarm


If the refrigerator door is left open for longer than 2 minutes a buzzer will sound and the icon above the alarm reset button will flash. The refrigerator temperature settings and bar graph will also flash. If the alarm is sounding for no apparent reason, check whether anything is holding the door open. Closing the door resets the alarm for a further 2 minutes. If you want to leave the door open while you load the fridge, you can turn the alarm off for 8 minutes by pressing the alarm reset button.

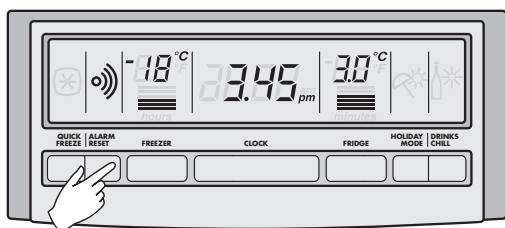

Freezer temperature alarm

If the freezer becomes too warm, a buzzer will sound and the icon above the Alarm Reset button, the freezer temperature and the bar graph will flash until the Alarm Reset button is pressed. After the Alarm Reset button has been pressed the freezer temperature setting and the bar graph will flash until normal operating temperatures are reached.

Check that the freezer door has not been left open or warm food has not been placed too close to the temperature sensor in the freezer. If the freezer is still too warm the alarm will sound again in 50 minutes, indicating that something may be wrong with your refrigerator.

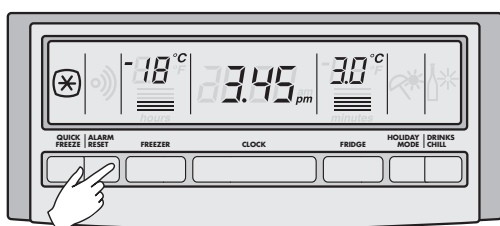


Drinks chill timer

If you set the drinks chill timer it will sound an alarm to remind you that you have left drinks in your freezer for quick chilling.

Suggested chilling times:

- 10 minutes for cans of drinks
- 20 minutes for bottles of wine
- 30 minutes for bottles of soft drink

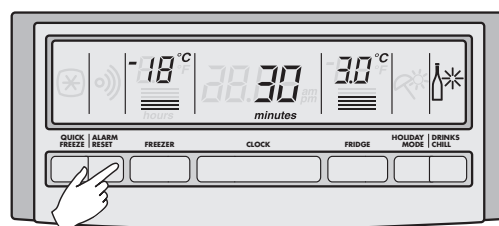

To use the timer, press the drinks chill button. An animated icon appears above the drinks chill button and the clock display is replaced by the countdown timer. Press the button once to set a 10 minute time limit, twice for 20 minutes and three times for 30 minutes. Press four times to turn the timer off. The timer will count down in 1 minute increments; you can change the timer or turn the timer off even after the countdown has started. When the countdown has finished a buzzer will sound and the icon above the alarm will flash until the alarm reset button is pressed. To stop the alarm and turn off the drinks chill timer, press the Alarm Reset button. If your drink is chilled, take it out of the freezer. If it is not cold enough, reset the drink chill function bearing in mind that the drink is already partially chilled.

Other special refrigerator features (electronic models only)

Your refrigerator:

- controls the compressor and fan independently to provide the best performance
- provides extra cooling depending on the number of door openings
- automatically defrosts during periods when the door is not being opened frequently
- has a 90 second memory backup on the display so that the time and settings are not lost during short power interruptions
- has blue feature lighting activated by opening the refrigerator door


NOTE: Display malfunctions may be due to brief power supply interruptions. If this occurs you simply need to turn the refrigerator off at the power point and wait 5 minutes for the refrigerator pressure to equalise then turn the refrigerator on again at the power point.

USING YOUR REFRIGERATOR

FREEZER COMPARTMENT FEATURES

Pizza shelf (where fitted)

This shelf is attached to the freezer wall beside the ice dispenser container. This area allows for convenient storage of pizza and other tall items.

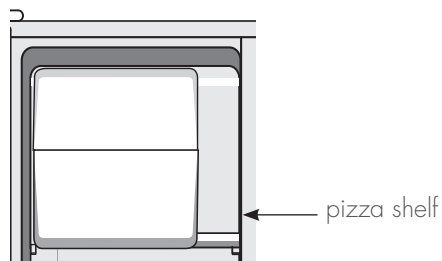


REFRIGERATOR COMPARTMENT FEATURES

Door storage bins

Both the refrigerator and freezer have door storage bins. You can adjust the door bins to meet different storage needs. All the door bins are completely removable for cleaning. If you want to remove or adjust a bin, lift it over the support lugs on the inner door panel. Push the bin down over the support lugs to lock it in place.


Dairy compartment

You can use the dairy compartment to store foods such as butter, margarine and cheese. The compartment is slightly warmer than the rest of the refrigerator compartment.

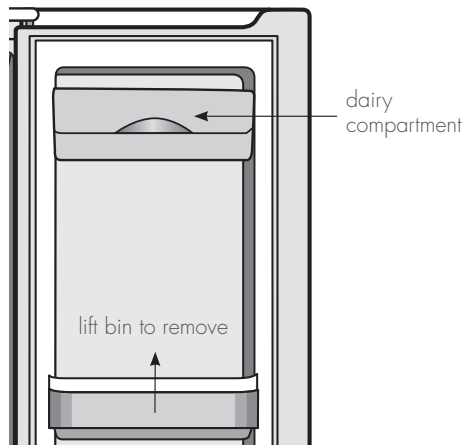


Deli compartment

The deli compartment is an ideal place to keep deli items, such as cold meats. Additional cold air is directed into the deli compartment, keeping the contents fresher for longer. It can also be used for faster chilling of food or drinks. To remove the deli compartment, pull forward, then up and forward.

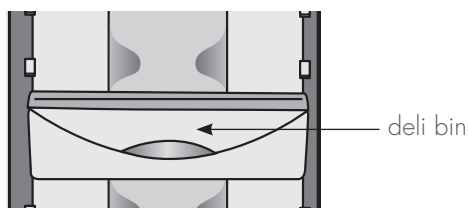

Crisper bin

- Storing vegetables
You can use the crisper bin to store vegetables, fruit or smallgoods. You can change the humidity inside the bin by sliding the humidity control.

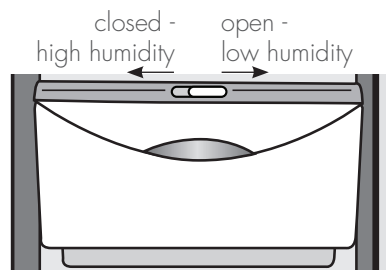


You should store vegetables in the crisper bin remembering to set the humidity control to more humid.

- Storing fruit & smallgoods
You can also store fruit & smallgoods in the crisper bin remembering to set the humidity control to less humid.
- Crisper bin removal
Remove the crisper bin(s) by pulling forward, then up and forward.

ICE AND WATER DISPENSER FEATURES

The ice and water dispenser conveniently dispenses cool, filtered water and ice cubes or crushed ice. To operate the ice dispenser, select an ice option using the touchpad.

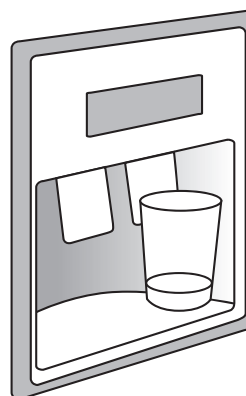

Press a glass against the dispensing paddle. Hold the top of the glass as close as possible to the ice outlet, so that you will catch all the ice. To stop dispensing ice, pull the glass away from the dispensing paddle. Do not remove the glass until the ice has finished coming out.

To operate the water dispenser, press a glass against the dispensing paddle. To stop dispensing water, pull the glass away from the dispensing paddle. A drip tray located at the base of the dispenser will catch small spills and allow them to evaporate. The drip tray is removable and dishwasher safe.

To clean the ice dispenser, please refer to instructions on page 27.



CLASSIC SIDE BY SIDE

USING YOUR REFRIGERATOR

HOW THE WATER DISPENSER WORKS

After the refrigerator is connected to the water supply, fill the water tank by holding a glass against the dispenser paddle. You may need to hold the glass against the paddle for up to 1½ minutes before water begins to flow. Continue to draw water for a further 3 minutes to rid the tank and plumbing connections of any impurities, the tank will automatically refill as you dispense water.



CAUTION

Remember, do not drink this water as it may have impurities in it!

Dispenser lamp

The dispenser has a light which can be turned on and off by pressing the Lamp button on the electronic display (see diagram below). The lamp is also activated for 6 seconds whenever a dispensing paddle is pressed. The light comes from 6 ultra bright LEDs (Light emitting diodes), which are part of the Electronic display and are not customer replaceable.



Changing the Water Filter

If you have purchased a refrigerator with an ice and water filter, please read the following care and use information. Your ice and water system filters water to your ice maker and water dispenser. It is located in the upper right hand corner of the food compartment.

When to change the water filter


Water conditions vary throughout the world, but changing the water filter every 6-9 months will ensure the highest possible water quality. If the filter has been in a refrigerator that has not been in use for a while (because of a move for example) change the filter before you reinstall the refrigerator. Even though the dispenser system will operate without filtration (with the filter removed) it is not recommended.

To change the filter


The water supply does not need to be turned off when you change the filter, however, do not use ice and water dispenser while installing the filter.

To change the filter:

1. Take a new filter cartridge (purchased from an Electrolux Service Centre).
2. Open the freezer door and leave it open until filter change is complete.
3. Remove light lens in the refrigerator compartment (see the section on changing the light bulbs).
4. Using the plastic spanner provided, unscrew the filter cup by turning it to the left. Some water could leak out as you remove the cup. This is normal. The filter cartridge should come down with the cup. If the filter cartridge remains in the housing, pull the filter cartridge down gently while twisting filter cartridge back and forth.

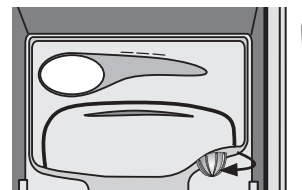

5. Discard the old filter cartridge.
6. Rinse out the cup under running water.
7. The large o-ring that seals the filter system sits in the o-ring groove down inside the cup. If the o-ring falls out during filter cartridge replacement, simply place it back in the groove before you screw the cup back in place. If the o-ring becomes damaged you will need to order one from the Electrolux Service Centre.
8. Remove the new filter cartridge from its packaging and place it in cup – the end with the small o-ring should be facing up.
9. Screw the cup with the filter back onto the housing. Do not use the plastic spanner to reinstall the cup. The filter cartridge will self-align as the cup is tightened. Be sure the cup is completely tightened.
10. Check for leaks. Wipe any water droplets from the filter cup. Fill a glass with water. If there is a leak, unscrew the filter cup and reinsert the filter cartridge. Check the placement of the large o-ring. Reinstall the filter cup making sure that it is tightened completely.
11. To condition the filter system and purge air from the water line, fill a glass with water. Continue flushing the system for 30 seconds to assure that the purest water possible is stored in the water tank.

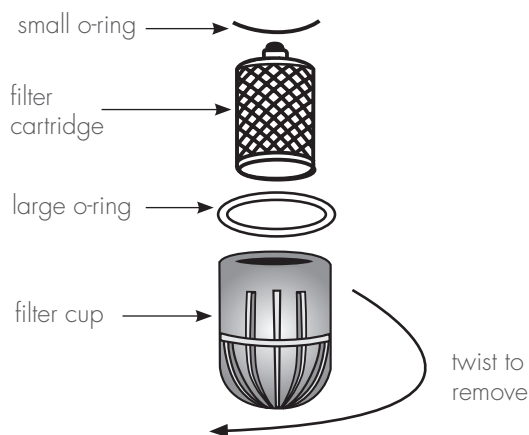

CAUTION

Do not pour water or excess cubes into the drip tray because it is not connected to a drain.

Chemicals from a malfunctioning softener can damage the ice maker. If the ice maker is connected to soft water, ensure that the softener is maintained and working properly.

If the dispensing paddle is pushed for more than 4 minutes, the dispenser motor may overload and stop. The overload protector will reset automatically after 3 or 4 minutes.

USING YOUR REFRIGERATOR


- If a large quantity of ice is needed at one time, it is best to remove cubes directly from the ice cube container
- When the ice maker is operating, it is normal to hear the sound of:
 - the motor running.
 - ice dropping into the ice container.
 - the water valve opening or closing.
 - ice loosening in the tray.
 - running water.

TIPS & INFORMATION

The water connection to your ice and water product should only be done by a licensed refrigeration mechanic, plumber or electrician.

Slide out glass shelves

To make access to your food easier, the refrigerator compartment is fitted with glass shelves. To remove the shelves, gently pull them forward until the shelf comes clear of shelf struts (where fitted). To return the shelf, make sure there is nothing behind it that may obstruct movement and gently push the shelf into the cabinet and into its original position.

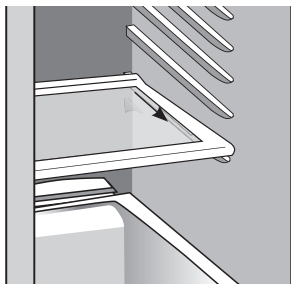

Freezer bins

Freezer bins and wire freezer shelves are fitted to freezer compartments. All the bins pull out for easy access.




To remove the bin, pull it out until it hits the stop then lift the front to unhook the stop while continuing to pull forward, until the bin is free of the runners under the shelf.

CHANGING THE REFRIGERATOR LIGHT BULBS

To change the food compartment light bulb:

1. Check your temperature settings and write them down (Ice & Water only).
2. Switch the refrigerator off at the wall and remove plug from power point.
3. Unclip the light lens by inserting your fingers under the light lens, lifting until the light lens is clear of the housing.

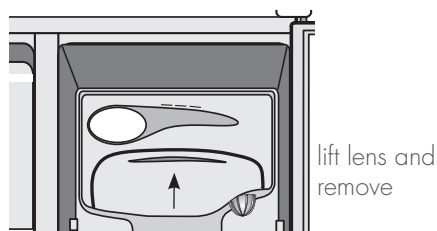


4. Unscrew the light bulb.
5. Replace the light bulb with a bulb of the same type and wattage.
6. Replace the light lens by inserting the tabs on the top of the light lens into the frame and pushing the bottom of the lens in with both hands.
7. Turn the refrigerator back on and reset your temperature to the previous settings (Ice & Water only). See the section on 'Adjusting Temperatures'

CHANGING THE FREEZER LIGHT BULBS

To change the freezer compartment light bulb:

1. Check your temperature settings and write them down (Ice & Water only).
2. Switch the refrigerator off at the wall and remove plug from power point.
3. Unclip the light lens by inserting your fingers under the light lens, lifting until the light lens is clear of the housing.

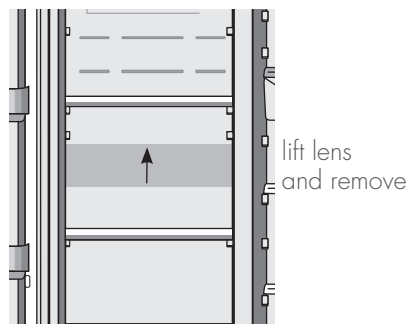


4. Unscrew the light bulb.
5. Replace the light bulb with a bulb of the same type and wattage.
6. Replace the light lens by inserting the tabs on the top of the light lens into the frame and pushing the bottom of the lens in with both hands.
7. Turn the refrigerator back on and reset your temperature to the previous settings (Ice & Water only). See the section on 'Adjusting Temperatures'



FEATURES


TOP MOUNT REFRIGERATOR ELECTRONIC MODELS

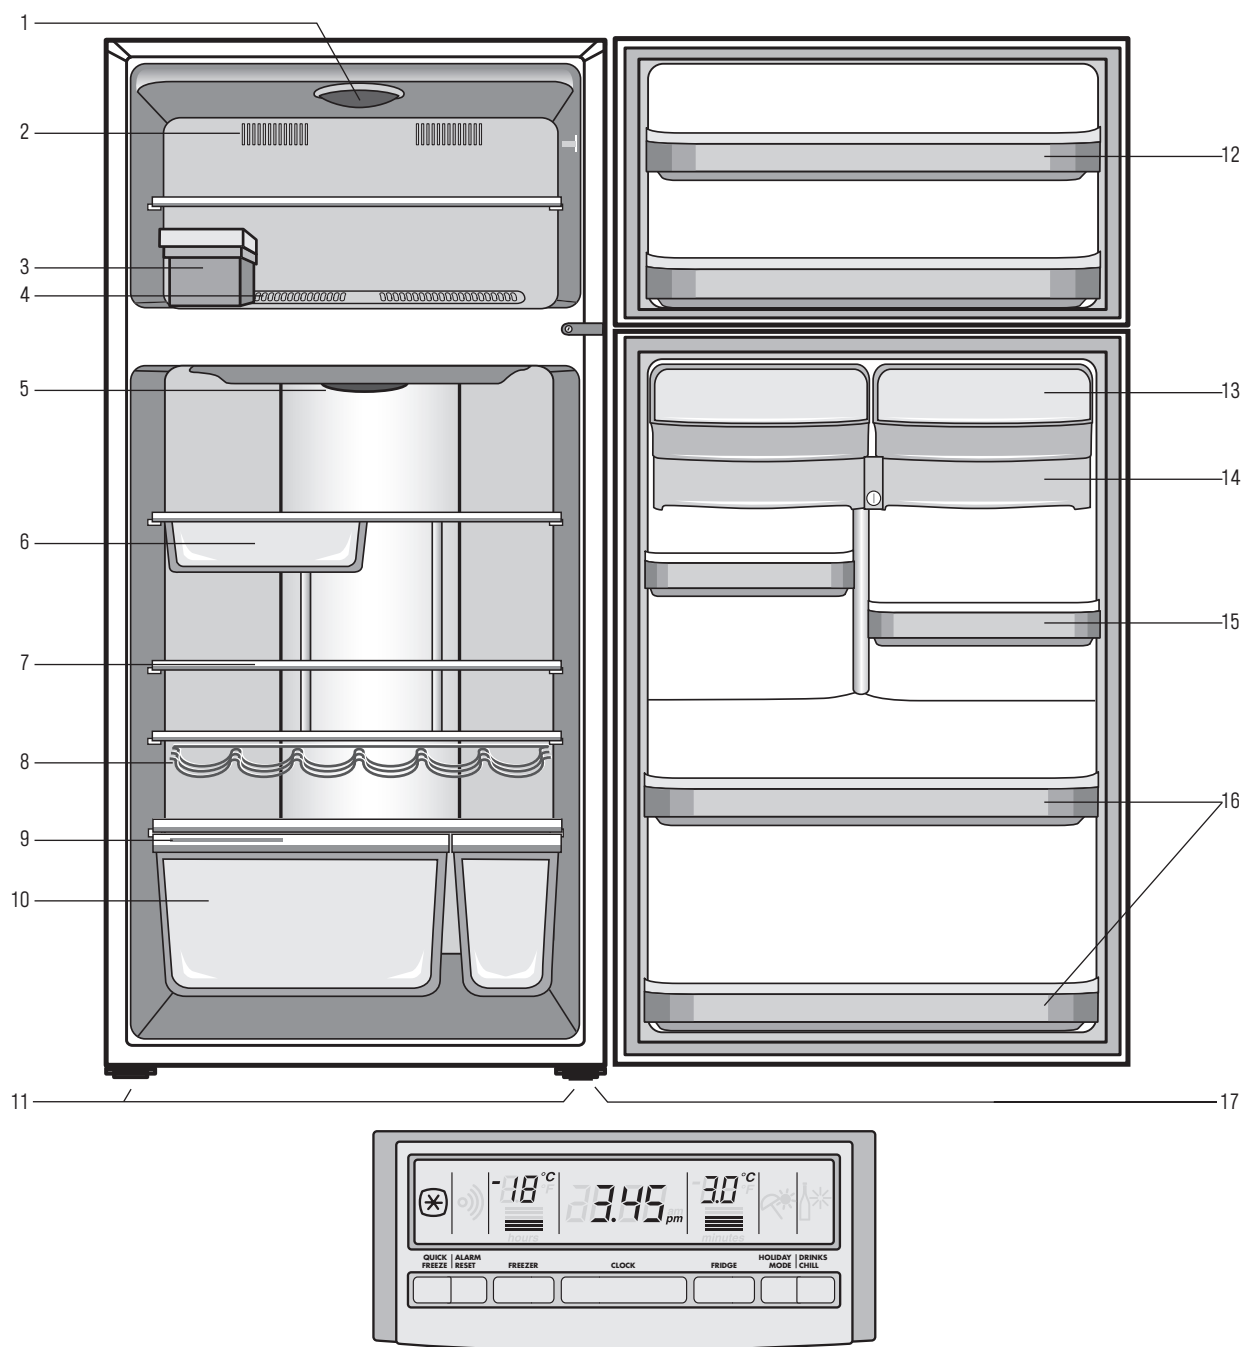

- | | | |
|--|----------------------------|------------------------------|
| 1 Freezer lighting (where fitted) | 6 Deli bin | 12 Freezer door bins |
| 2 Freezer air delivery vents | 7 Adjustable glass shelves | 13 Twin dairy compartments |
| 3 Ice station with ice cube trays (where fitted) | 8 Wine rack (where fitted) | 14 Storesafe™ bin (lockable) |
| 4 Freezer air return vents | 9 Humidity control | 15 Adjustable door bins |
| 5 Fridge lighting | 10 Crisper bins | 16 Bottle/can bins |
| | 11 Adjustable rollers | 17 Stabilising foot |

Features may vary depending on model. Not all models will have features listed.

BOTTOM MOUNT REFRIGERATOR ELECTRONIC MODELS


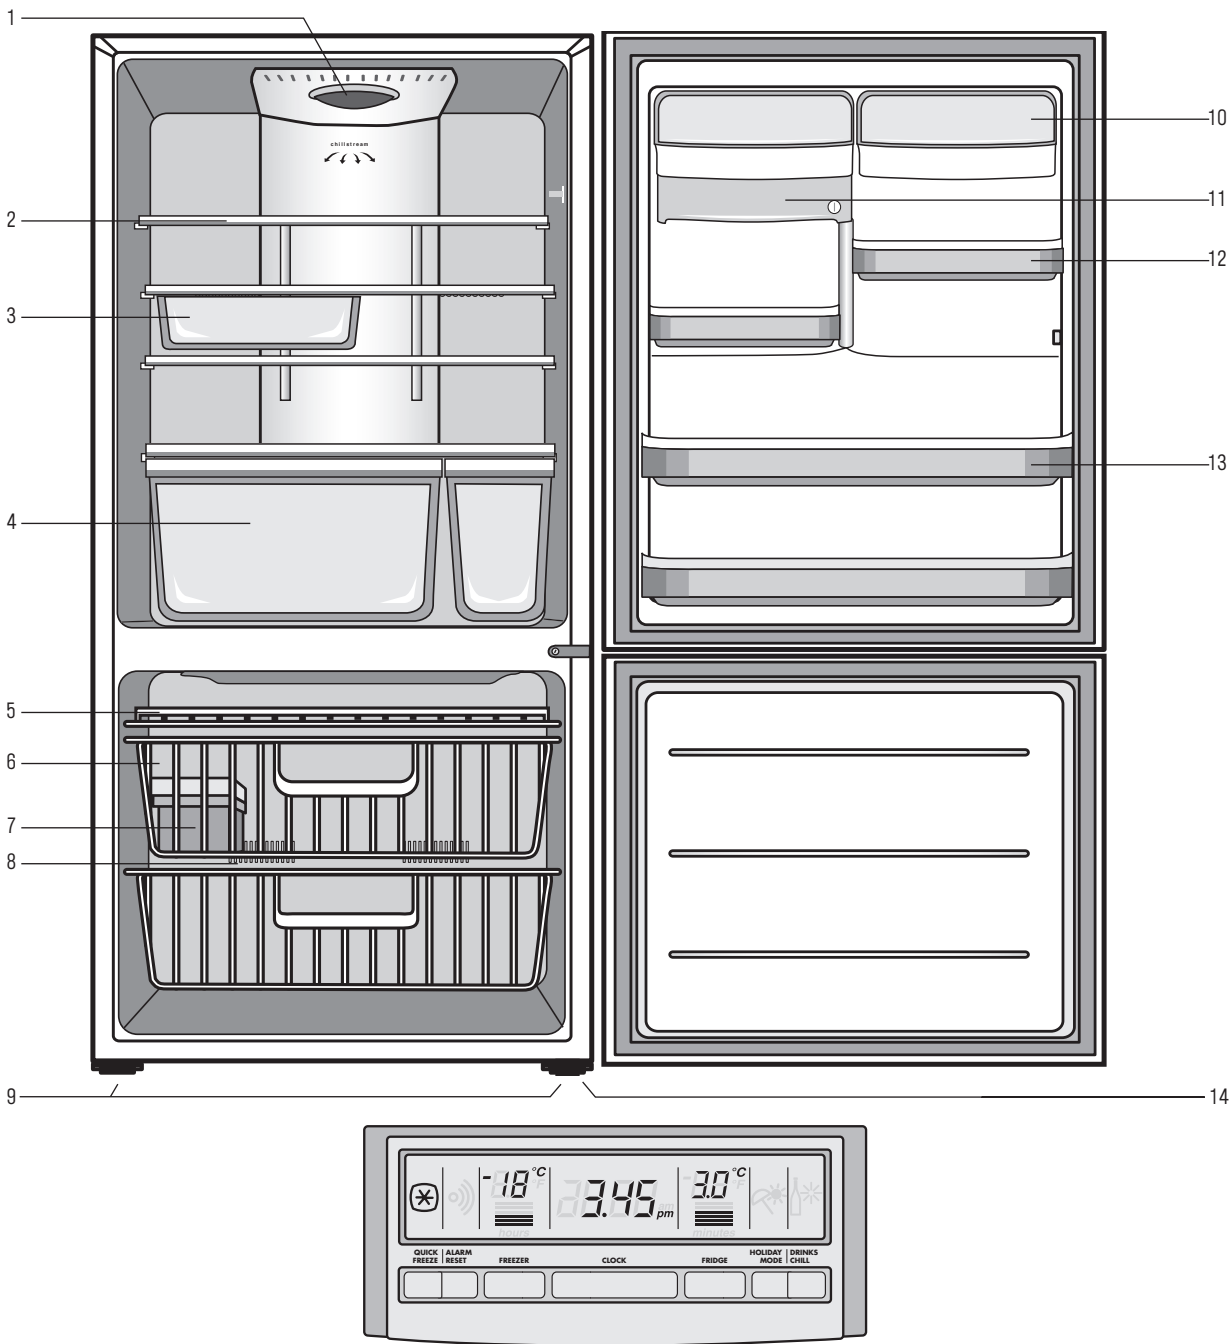


- | | | |
|----------------------------|---|--|
| 1 Fridge lighting | 6 Wire freezer baskets | 11 Storesafe™ bin (lockable)
– where fitted |
| 2 Adjustable glass shelves | 7 Ice station with ice cube
trays (where fitted) | 12 Adjustable door bins |
| 3 Deli bin | 8 Freezer air return vents | 13 Bottle bins |
| 4 Crisper bins | 9 Adjustable rollers | 14 Stabilising foot |
| 5 Return shelf | | |

Features may vary depending on model. Not all models will have features listed.

FEATURES



TOP MOUNT REFRIGERATOR MANUAL CONTROLS

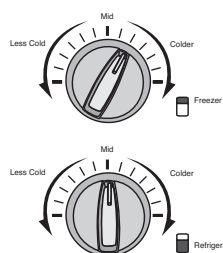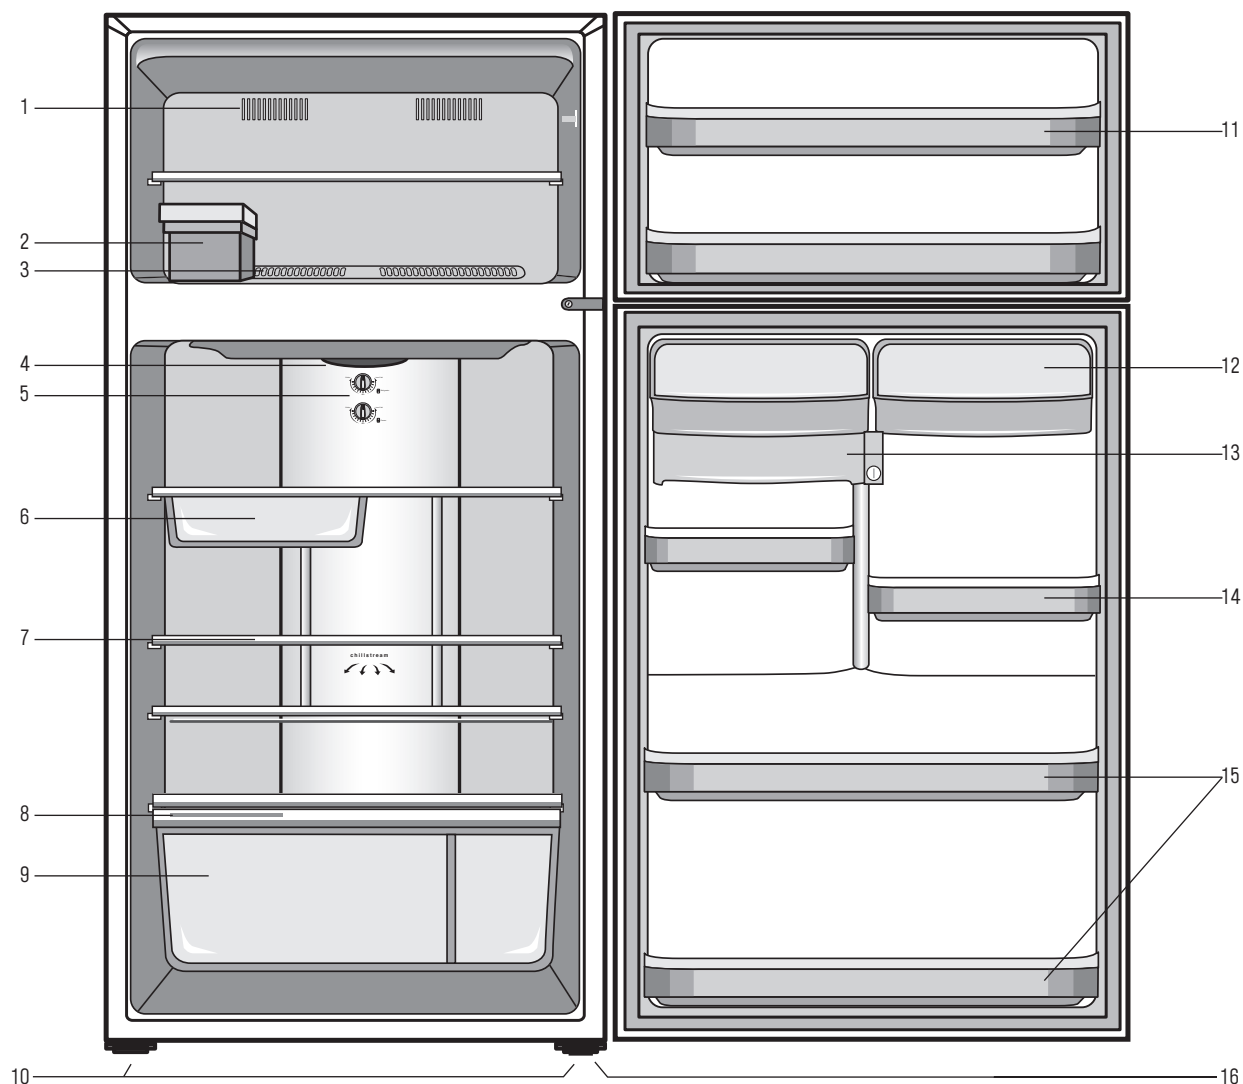

- | | | |
|--|----------------------------|------------------------------|
| 1 Freezer air delivery vents | 6 Deli bin | 12 Twin dairy compartments |
| 2 Ice station with ice cube trays (where fitted) | 7 Adjustable glass shelves | 13 Storesafe™ bin (lockable) |
| 3 Freezer air return vents | 8 Humidity control | 14 Adjustable door bins |
| 4 Fridge lighting | 9 Crisper bin | 15 Bottle/can bins |
| 5 Fridge & freezer controls | 10 Adjustable rollers | 16 Stabilising foot |
| | 11 Freezer door bins | |

Features may vary depending on model. Not all models will have features listed.

BOTTOM MOUNT REFRIGERATOR **MANUAL CONTROLS**

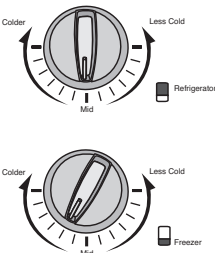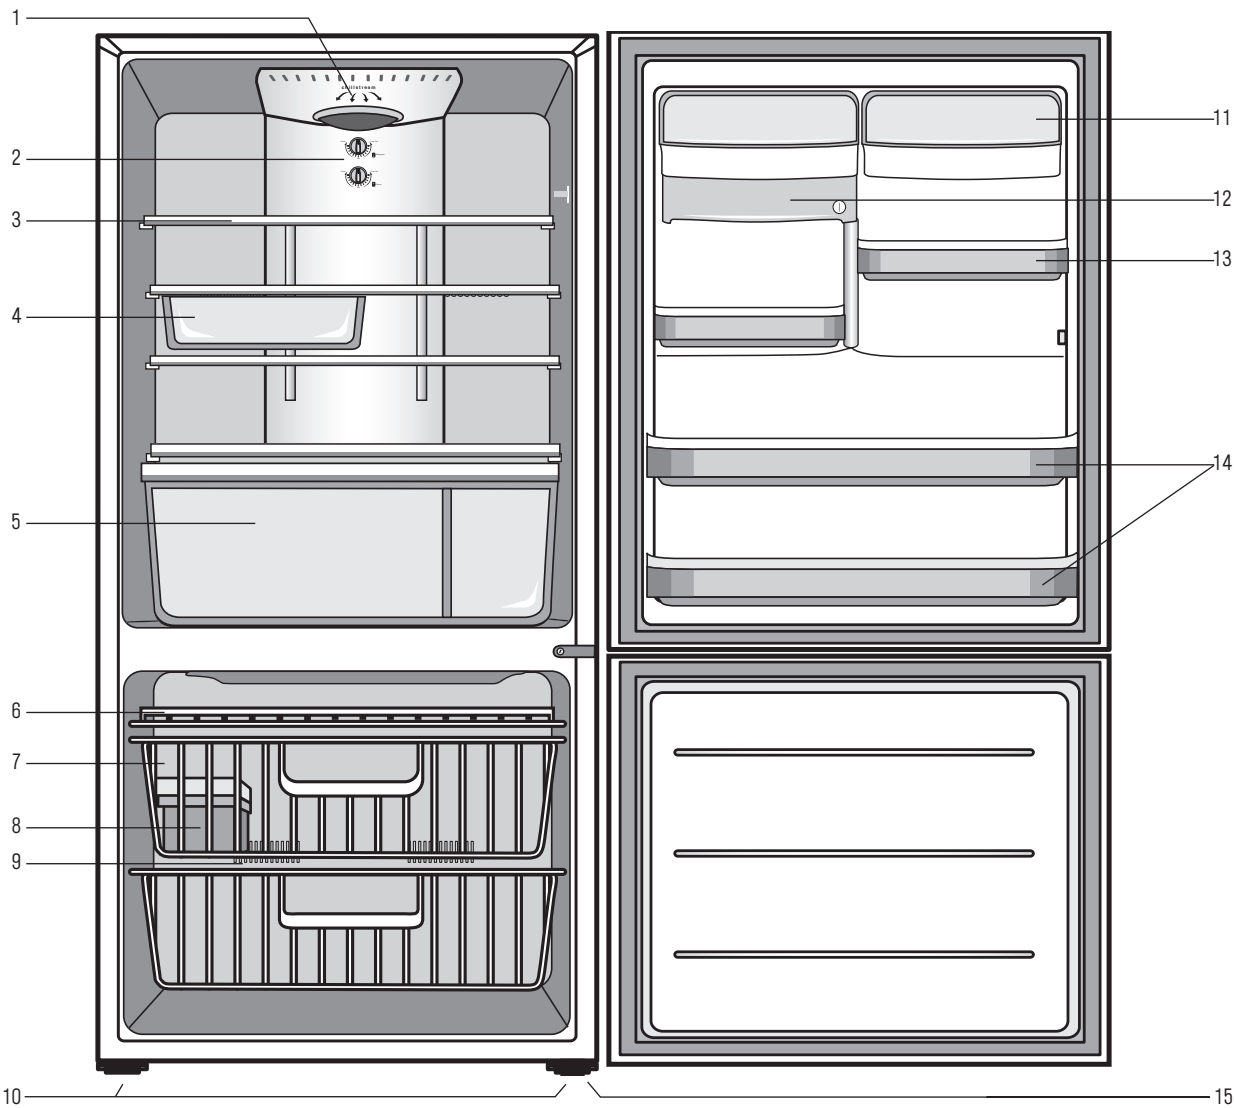


- | | | |
|-----------------------------|---|--|
| 1 Fridge lighting | 7 Wire freezer baskets | 12 Storesafe™ bin (lockable)
– where fitted |
| 2 Fridge & freezer controls | 8 Ice station with ice cube
trays (where fitted) | 13 Adjustable door bins |
| 3 Adjustable glass shelves | 9 Freezer air return vents | 14 Bottle/can bins |
| 4 Deli bin | 10 Adjustable rollers | 15 Stabilising foot |
| 5 Crisper bin | 11 Twin dairy compartments | |
| 6 Return shelf | | |

Features may vary depending on model. Not all models will have features listed.

FEATURES


SINGLE DOOR ALL REFRIGERATOR MODEL

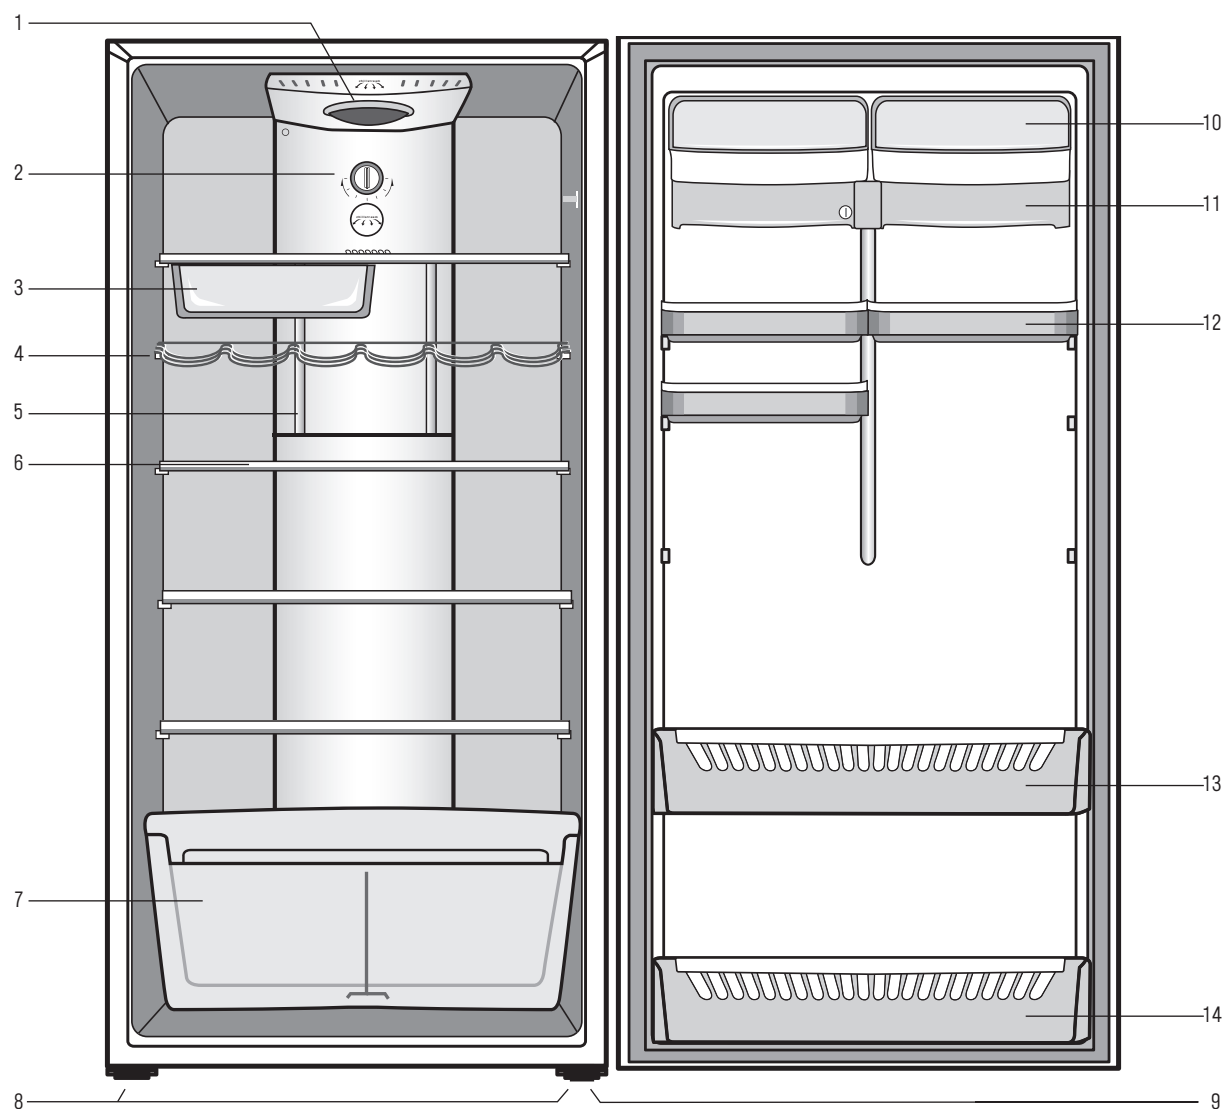

- | | | |
|---------------------------------|----------------------------|----|
| 1 Fridge lighting | 6 Adjustable glass shelves | 11 |
| 2 Temperature control | 7 Crisper bins | |
| 3 Deli bin | 8 Adjustable rollers | |
| 4 Wine rack (where fitted) | 9 Stabilising foot | |
| 5 Strip lighting (where fitted) | 10 Twin dairy compartments | |

Features may vary depending on model. Not all models will have features listed.

SINGLE DOOR ALL FREEZER MODEL

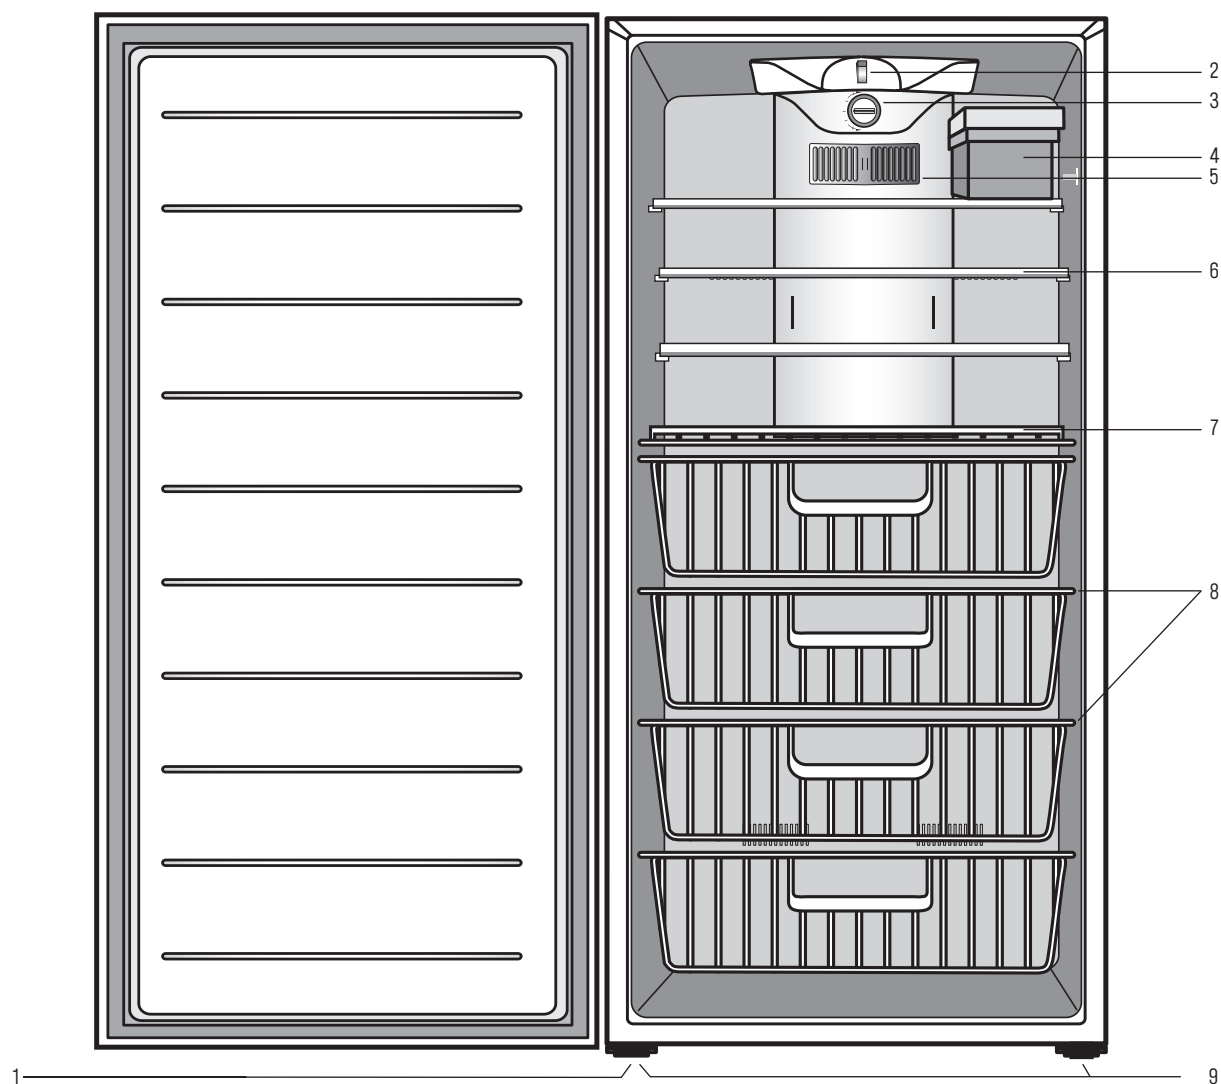

- 1 Stabilising foot
- 2 Light switch
- 3 Temperature control

- 4 Ice station with ice cube trays
- 5 Air delivery vents
- 6 Wire shelves

- 7 Return shelf
- 8 Wire baskets
- 9 Adjustable rollers

Features may vary depending on model. Not all models will have features listed.



Westinghouse

USING YOUR APPLIANCE

ADJUSTING TEMPERATURES

Set the temperature by using the main temperature controls at the rear of the refrigerator compartment. When you first start your refrigerator, set both refrigerator and freezer controls to MID. The refrigerator temperature control is affected by altitude and it is recommended that it be set warmer to compensate. e.g. At 1000 metres above sea level set the refrigerator temperature control to one setting warmer than MID.



TIPS & INFORMATION

A good indication of optimal freezer temperature is ice cream that is frozen, but still soft enough for easy scooping. For the fridge compartment, we recommend using drinking water and simply adjusting the fridge controls until the water is at your ideal temperature.

To change settings. When you change temperature settings, make small adjustments and wait 24 hours before assessing whether you need to make any further changes.




TIPS & INFORMATION


- Coldest freezer setting is not recommended in normal and very hot climates as this will limit the cooling to the refrigerator section.
- In very cold climates (where temperatures are below 10°C) the freezer may need to be set colder.

ADJUSTING TEMPERATURES (MANUAL MODELS)


- Adjusting the freezer temperature – TOP MOUNT freezer model
 1. Select the freezer control (top knob).
 2. Rotate the knob clockwise to set colder.
 3. Rotate the knob anti-clockwise to set less cold.

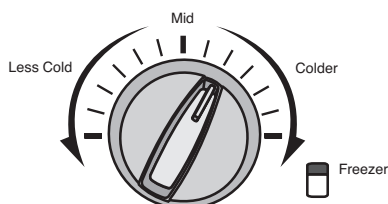


- Adjusting the refrigerator temperature – TOP MOUNT freezer model
 1. Select the refrigerator control (bottom knob).
 2. Rotate the knob clockwise to set colder.
 3. Rotate the knob anti-clockwise to set less cold.

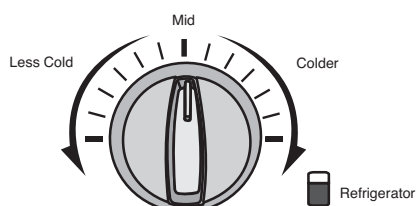


- Adjusting the refrigerator temperature – BOTTOM MOUNT freezer model
 1. Select the refrigerator control (top knob).
 2. Rotate the knob clockwise to set colder.
 3. Rotate the knob anti-clockwise to set less cold.

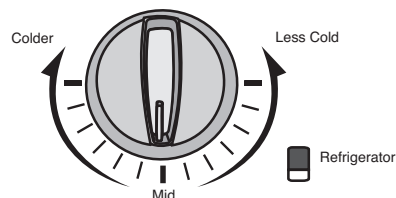


- Adjusting the freezer temperature – BOTTOM MOUNT freezer model
 1. Select the freezer control (bottom knob).
 2. Rotate the knob clockwise to set colder.
 3. Rotate the knob anti-clockwise to set less cold.

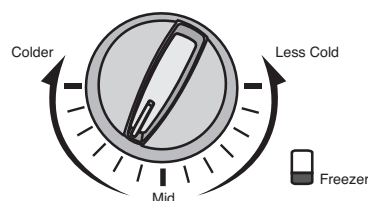

- Adjusting the all refrigerator temperature – SINGLE DOOR ALL REFRIGERATOR model
 1. Rotate the knob clockwise to set colder.
 2. Rotate the knob anti-clockwise to set less cold.

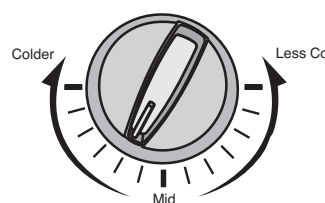

- Adjusting the all freezer temperature – SINGLE DOOR ALL FREEZER model
 1. Rotate the knob clockwise to set colder.
 2. Rotate the knob anti-clockwise to set less cold.

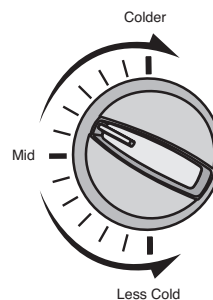

ADJUSTING TEMPERATURES (ELECTRONIC MODELS)

For instructions on using electronic controls, please see page 27.

USING YOUR APPLIANCE

This section tells you how to make the most of the many useful features –cleaning instructions can be found on page 8.

Door storage bins


The top mount freezer model (TM), bottom mount freezer model (BM) and all refrigerator (AR) are fitted with door storage bins. You can adjust these bins to meet different storage needs. All the door bins are completely removable for cleaning. If you want to remove or adjust a bin, lift it over the support lugs on the inner door panel. To replace, push the bin down over the support lugs to lock it in place.

Dairy compartment

You can use the dairy compartment to store foods such as butter, margarine and cheeses. The compartment is slightly warmer than the rest of the refrigerator compartment and the lid provides protection against odours.

Crisper bin

You can use the crisper bin to store vegetables, fruit or smallgoods. You can change the humidity inside the bin by sliding the humidity control.

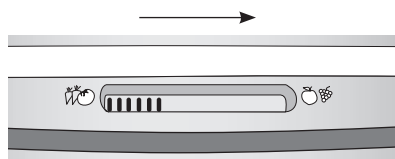

Storing vegetables

You should store vegetables in the crisper bin remembering to set the humidity control to more humid (closed).

Storing fruit & smallgoods

You can also store fruit & smallgoods in the crisper bin remembering to set the humidity control to less humid (open).

Crisper bin and shelf removal

1. Remove the crisper bin(s) by pulling forward, then up and forward.
2. Remove the crisper shelf by lifting the catches on the underside of the shelf and pulling the shelf forward.

Deli bin

You can use the deli bin to store foods such as smallgoods, fresh or cooked meat and cheese. You can also use it as an additional crisper. The bin will prevent strong food odours or smells going into the rest of the refrigerator.


To remove the deli bin, pull it forward, then lift it up and pull it further forward.

FOOD COMPARTMENT FEATURES

Storesafe™ lockable bins

These bins are designed for the storage of items such as cosmetics and medicines and slide out for easy access. The left hand bin has a lock that is operated by turning the knob located on the fixed area between the bins. This may be turned with a coin.

You can remove the Storesafe™ bin(s) for cleaning. Remove the bin by simply pulling past the stop in the runners. You will need to lift the bin while pulling it forward. A small amount of force may be required to overcome the front stop.

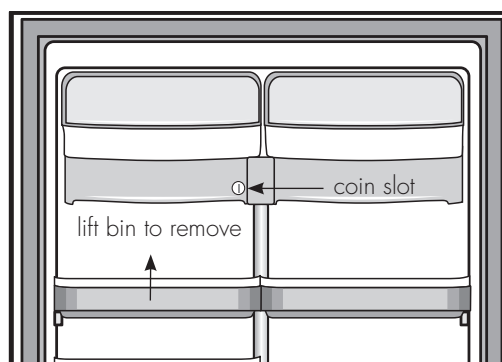

⚠ CAUTION

Do not store solvents or flammable materials such as nail polish remover or lighter fluid inside your appliance. They will affect the life of the plastic components and may taint stored food.




USING YOUR APPLIANCE

Spill Safe glass shelves (where fitted)

Spill safe glass shelves keep spills on the shelf. A shelf retaining system minimises accidental movement of shelves. The shelves can be adjusted to many different heights. Spill safe glass shelves are not to be used as slide out shelves.

To remove the shelves, gently pull them forward until the shelf comes clear of shelf struts.

To return the shelf, make sure there is nothing behind it that may obstruct movement and gently push the shelf into the cabinet and into its original position.

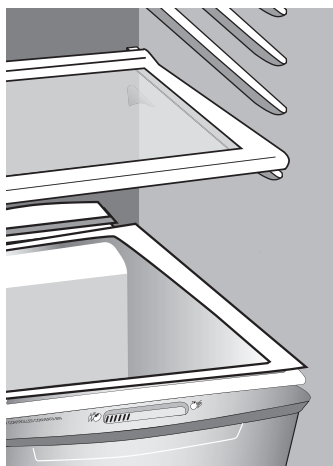

Wire Shelves (where fitted)

To remove these shelves from the cabinet, lift the rear of the shelf and pull forward.

Wine Rack (where fitted)

The wine rack can be used to store various types of bottles such as wine or beer. Bottles should be stored with the bottom end towards the back of the refrigerator. If you want to remove the wine rack or change its position, lift the rear of the rack and pull forward.


Freezer baskets (where fitted)

Freezer baskets and a freezer shelf are fitted to bottom mount (BM) freezers and single door all freezers (AF).

Wire baskets are used to provide easy visibility of the contents. Both the baskets and the shelf pull out for easy access and have a stop to prevent the basket and shelf being pulled out too far.



To remove the basket, pull it out until it hits the stop then lift the front to unhook the stop while continuing to pull forward.

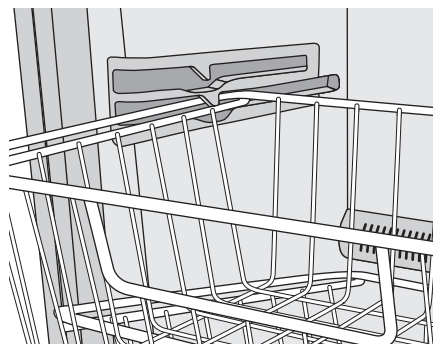


USING YOUR APPLIANCE

CHANGING THE LIGHT BULBS


Refrigerator light

1. Switch off the power at the power point and remove the refrigerator's power cord from the power point.
2. Remove shelves.
3. Carefully unclip the light cover. You do this by pulling the upper part of the cover towards the front of the cabinet.
4. Unscrew the light bulb and replace it with a bulb that is the same as the original.
5. Replace the light cover by hooking the light cover lugs into the bottom of the housing and pressing the upper part of the cover until it clips in.
6. Replace shelves.
7. Wait 5 minutes to ensure pressures in the refrigeration system are equalized. Then reconnect and turn the refrigerator on at the power point.

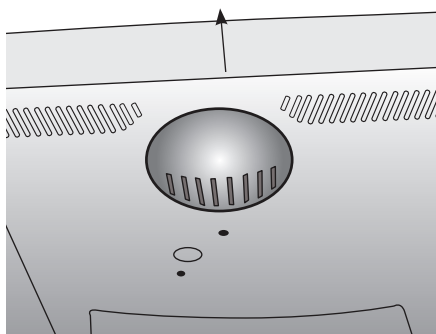


Freezer light (where fitted)

1. Switch off the power at the power point and remove the refrigerator's power cord from the power point.
2. Carefully unclip the light cover. You do this by pulling the light cover tab at the rear towards the front of the cabinet.
3. Unscrew the light bulb and replace it with a bulb that is the same as the original.
4. Replace the light cover by hooking the light cover lugs into the front of the housing and pressing the rear of the cover up until it clips in.
5. Wait 5 minutes to ensure pressures in the refrigeration system are equalized. Then reconnect and turn the refrigerator on at the power point.

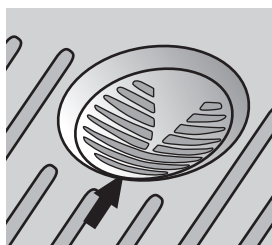

TOP FREEZER MODEL
(ELECTRONIC
MODELS ONLY)

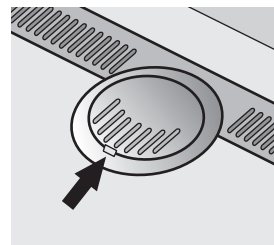

SINGLE DOOR ALL
FREEZER MODEL



TROUBLESHOOTING

TROUBLESHOOTING

PROBLEM	SOLUTION
When your appliance is not operating	<ul style="list-style-type: none">• Check that the power cord is plugged into the power outlet properly and that the outlet is switched 'ON'.• Try running another appliance from the power outlet. If no power is coming from the outlet you may have blown a fuse or tripped a circuit of your household power supply.• Try adjusting the temperature control to a slightly "colder" position.• It is normal for the freezer fan NOT to operate during the automatic defrost cycle, or for a short time after the appliance is switched on.
When there is refrigerator/freezer noise	<p>Modern refrigerators/freezers with increased storage capacity use high speed compressors. These can provide a seemingly high level of sound which is quite normal. Normal operational sounds include:</p> <ul style="list-style-type: none">• Occasional gurgling, similar to water boiling.• Air flow noise (air circulates because of a small fan).• A popping noise heard during automatic defrost.• A clicking noise heard just before the compressor starts (this is merely the automatic switching action of the temperature control, turning the compressor on or off). <p>Other strange sounds may mean that you need to check and take action. For example, noises may mean that:</p> <ul style="list-style-type: none">• The cabinet is not level.• The floor is uneven or weak.• Bottles are badly placed and rattling.• There are vibrations from an object on top of or behind or beside the refrigerator.• The back of the refrigerator cabinet is touching the wall. <p>Remember it is quite normal for noise to seem louder just after the refrigerator starts operating.</p>
If there are odours inside the appliance	<ul style="list-style-type: none">• The interior may need cleaning.• Some foods produce odours.• Some containers and wrapping can cause odours.• Ask yourself if the odour started about the same time you started storing something unusual.

PROBLEM	SOLUTION
When the motor seems to run more than expected	<p>Your new appliance provides you with large capacities in both the refrigerator section and the separate freezer. It is normal for the motor to operate frequently. However, to keep operation to a minimum, check the following:</p> <ul style="list-style-type: none">• Are doors kept open too long or too often?• Are controls set too cold? See 'Adjusting temperature' in your relevant model section.• Have large amounts of warm food just recently been stored? Summer, festive seasons and holidays usually mean a lot more work for your appliance.• If the day is hot or the room is very warm, the appliance will need to run more than normal.• The appliance will run more than normal just after you install it or when it has been turned off for a long time.
If the temperature in the refrigerator is too warm	<ul style="list-style-type: none">• Check that the appliance has enough clearance at the sides, back and top. Refer to the installation Instructions at the front of this booklet.• Refer to 'Adjusting temperature' in your relevant model section.• You may have kept the door open too long or too frequently.• Food containers or packaging may be holding a door open.
If the temperature in the refrigerator is too cold	<ul style="list-style-type: none">• Refer to 'Adjusting temperature' in your relevant model section.• Increase the temperature to avoid high energy consumption.
If heavy frosting occurs in the freezer	<p>Make sure you fully close the freezer and fridge doors. If the doors are left partly open a heavy frost will coat the inside of the freezer. If a frost develops, remove it. Take care to properly close the doors and the frost will not reoccur.</p>
If water drips on the floor	<p>The defrost water tray, (located at the back or underneath of the cabinet) may not be properly positioned, or the drain tube may not be properly positioned to direct water into this tray. You may need to pull the refrigerator away from the wall to check the tray and tube.</p>
Fridge does not exit vacation mode	<p>Turn appliance off at the powerpoint. Leave off for three (3) minutes for the memory to clear, then turn back on.</p>

ICE + WATER TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSES	SOLUTION
AUTOMATIC ICE-MAKER		
The ice maker is not making any ice	• Ice maker is in the OFF position	• Put switch in the ON position
	• Household water line valve is not open	• Turn on the household water line valve
	• The freezer is not cold enough	• See the Troubleshooting section: 'If the temperature in the refrigerator is too warm' on page 10.
	• The water dispenser may not be dispensing water	• If it isn't, the ice & water filter cartridge may be clogged or restricted by foreign material, and will need to be replaced
The ice-maker is not making enough ice	• The ice maker is producing less ice than you expect	• The ice maker should produce approximately 2–3 kilograms of ice every 24 hours
	• The freezer is not cold enough	• Refer to 'Adjusting Temperature' in your relevant model section
	• Household water line valve is not open	• Open the household water line valve
	• The water dispenser is dispensing slower than normal	• Replace the water filter cartridge
Ice cubes are hollow or smaller than normal	• Restricted water flow to the ice maker	• Replace the filter cartridge, as the water filter cartridge may be clogged.
The ice has a bad odour and taste	• The ice has picked up odour or flavour from strongly flavoured food stored in the refrigerator or freezer	• Cover foods tightly. Discard stale ice. The ice maker will produce a fresh supply
	• The water running into the ice maker has poor taste or colour	• Add a filter to water supply line. Consult a water purifying company
	• Ice not used frequently enough	• Discard stale ice
ICE DISPENSER		
The dispenser will not dispense ice	• The ice storage container is empty	• When the first supply of ice drops into the container, the dispenser should operate.
	• The freezer temperature is set too warm	• Turn the freezer control to a higher setting so that ice cubes will be made. When first supply of ice is made, dispenser will operate
	• Household water line valve is not open	• Open the household water line valve. Allow sufficient time for the ice to be made. When ice is made the dispenser should operate
	• The freezer door is not closed	• Ensure the freezer door is closed
	• The ice dispensing arm has been held in for more than 4-5 minutes	• The motor is overloaded. The motor overload protector will reset in approximately 3 minutes. Ice can then be dispensed
The ice dispenser is jammed	• Ice has melted and frozen around the auger due to infrequent use, temperature fluctuations, and/or power outages	• Remove the ice container and empty it's contents. Clean and dry the container and replace to its proper position. When new ice is made, the dispenser should operate
	• Ice cubes are jammed between the ice maker and back of ice container	• Remove ice cubes that are jamming dispenser
	• Ice cubes are frozen together	• Use the dispenser often so that cubes do not freeze together
	• Ice cubes are hollow or smaller than normal	• The water filter cartridge could be clogged. Cartridge may need replacing



NOTES

[illegible]

NOTES

Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND

APPLIANCE: WESTINGHOUSE COMPACT SIDE BY SIDE, WESTINGHOUSE CLASSIC SIDE BY SIDE, WESTINGHOUSE TOP MOUNT, WESTINGHOUSE BOTTOM MOUNT, WESTING HOUSE SINGLE DOOR ALL REFRIGERATOR, WESTINGHOUSE SINGLE DOOR ALL FREEZER.

This document sets out the terms and conditions of product warranties for Electrolux branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Electrolux appliance.

General Terms and Conditions

- In this warranty
 - 'Electrolux' means Electrolux Home Products Pty Ltd ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
 - 'Appliance' means any Electrolux product purchased by you accompanied by this document;
 - 'Warranty Period' means
 - where you use the Appliance for personal, domestic or household purposes in Australia the period of '24' months and in New Zealand the period of '24' months;
 - where you use the Appliance for commercial purposes, in Australia the period of '3' months and in New Zealand the period of '3' months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
 - 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
- This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
- Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
- During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
- Parts and Appliances not supplied by Electrolux are not covered by this warranty.
- Where you are within an Electrolux service area, this warranty covers the cost of transport of the Appliance to and from Authorised Service Centres of Electrolux and travelling costs for representatives of the Authorised Service Centre to and from your home or business. If you are outside an Electrolux service area, you will bear these costs. For information about whether you are within an Electrolux service area, please phone 13 13 49 in Australia, or 0800 10 66 10 in New Zealand.
- Proof of purchase is required before you can make a claim under this warranty.
- You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
 - The Appliance is damaged by:
 - accident
 - misuse or abuse, including failure to properly maintain or service
 - normal wear and tear
 - power surges, electrical storm damage or incorrect power supply
 - incomplete or improper installation
 - incorrect, improper or inappropriate operation
 - insect or vermin infestation.
 - The Appliance is modified without authority from Electrolux in writing.
 - The Appliance's serial number or warranty seal has been removed or defaced.
 - The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.
- This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the Australian State where the Appliance was purchased or the law applicable in New Zealand if the Appliance was

Limitation of Liability

- To the extent permitted by law:
 - Electrolux excludes all warranties other than as contained in this document;
 - Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.
- Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so):
 - in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or
 - in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied; and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

EXTENDED WARRANTIES AND INDEMNITY

Sealed Refrigeration System Warranty

For a further period of three years following the expiry of the Warranty period, Electrolux or its agent will supply replacements for, or at the sole option of Electrolux, repair, all parts it finds defective in the Sealed Refrigeration System which comprises: compressor, condenser, evaporator, dryer and tubing. During this three year period you will pay for the costs of labour (including any call out or service fees), and freight if necessary in replacing defective parts in the Sealed Refrigeration System. You will pay for the costs of transport of the Appliance if further service is required and the costs of parts or repairs to parts other than those included in the Sealed Refrigeration System

Frozen Food indemnity

Subject to the following exclusions, Electrolux will indemnify you for a period of 24 months from the date of purchase of the Appliance against any loss or damage to frozen foodstuffs due to a Sealed Refrigeration System breakdown. This indemnity will be limited to:

- in the case of freezers with a capacity of less than 400 litres – AU\$150
 - in the case of freezers with a capacity of 400 litres or more – AU\$300
- This indemnity does not cover loss or damage to frozen foodstuffs occasioned by:
- failure to plug in the freezer to a properly connected power supply or failure to switch on the power point
 - accidental removal of the plug from the power point or switching off the power supply;
 - failure to keep the door or lid of the freezer closed
 - the introduction of abnormal heat loads to the freezer;
 - failure to observe the operating and installation instructions supplied with the freezer; and
 - failure to defrost the freezer at recommended intervals on chest freezers or non frost free models

Important Notice

Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

FOR SERVICE or to find the address of your nearest state service centre in Australia PLEASE CALL 13 13 49 For the cost of a local call (Australia only)	SERVICE AUSTRALIA  Electrolux ELECTROLUX HOME PRODUCTS www.electrolux.com.au	FOR SPARE PARTS or to find the address of your nearest state spare parts centre in Australia PLEASE CALL 13 13 50 For the cost of a local call (Australia only)
FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand FREE CALL 0800 10 66 10 (New Zealand only)	SERVICE NEW ZEALAND  Electrolux ELECTROLUX HOME PRODUCTS www.electrolux.co.nz	FOR SPARE PARTS or to find the address of your nearest state spare parts centre in New Zealand FREE CALL 0800 10 66 20 (New Zealand only)



Westinghouse


**For more information on all Westinghouse appliances,
or for dimension and installation information, call into your retailer,
phone or email our customer care team or visit our website:**

AUSTRALIA

phone: 1300 363 640
fax: 1800 350 067
email: customercare@electrolux.com.au
web: www.westinghouse.com.au

NEW ZEALAND

phone: 09 573 2384
fax: 0800 363 600
email: customercare@electrolux.co.nz
web: www.westinghouse.co.nz

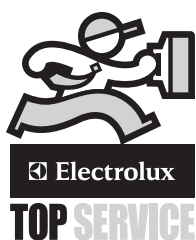

TOP SERVICE

Top Service encompasses the after sales service provided by The Electrolux Group to consumers including delivery, home service and spare parts.

**Westinghouse. We are part of the Electrolux family.
Share more of our thinking at www.electrolux.com**

© 2007 Electrolux Home Products Pty Ltd ABN 51 004 762 341
Print code: WMANREFRIG Issue Date: Sept 07
Part number: 1451656



Westinghouse